

## GENERAL INFORMATION

---

### SERVICE RULES

1. Use genuine Honda or Honda-recommended parts and lubricants or their equivalents. Parts that do not meet Honda's design specifications may cause damage to the scooter.
2. Use the special tools designed for this product to avoid damage and incorrect assembly.
3. Use only metric tools when servicing the scooter. Metric bolts, nuts and screws are not interchangeable with English fasteners.
4. Install new gaskets, O-rings, cotter pins, and lock plates when reassembling.
5. When tightening bolts or nuts, begin with the larger diameter or inner bolt first. Then tighten to the specified torque diagonally in incremental steps unless a particular sequence is specified.
6. Clean parts in cleaning solvent upon disassembly. Lubricate any sliding surfaces before reassembly.
7. After reassembly, check all parts for proper installation and operation.
8. Route all electrical wires as shown in the Cable and Harness Routing (page 1-17).

### ABBREVIATION

Throughout this manual, the following abbreviations are used to identify the respective parts or systems.

<b>Abbrev. term</b>	<b>Full term</b>
PGM-FI	Programmed Fuel Injection
MAP sensor	Manifold Absolute Pressure sensor
TP sensor	Throttle Position sensor
ECT sensor	Engine Coolant Temperature sensor
IAT sensor	Intake Air Temperature sensor
CKP sensor	Crankshaft Position sensor
IACV	Idle Air Control Valve
ECM	Engine Control Module
EEPROM	Electrically Erasable Programmable Read Only Memory
DLC	Data Link Connector
SCS connector	Service Check Short connector
MIL	Malfunction Indicator Lamp
PCV	Positive Crankcase Ventilation