

GENERAL INFORMATION

FUEL SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Fuel pump mounting nut	7	6	12 (1.2, 9)	See page 6-37
Left floor panel side frame mounting bolt	1	10	49 (5.0, 36)	
Air connecting hose band	–	–	–	See page 6-40
Sensor unit mounting torx screw	3	5	3.4 (0.35, 2.5)	
Throttle cable bracket screw	1	5	3.4 (0.35, 2.5)	See page 6-41
IACV mounting torx screw	2	4	2.1 (0.21, 1.5)	
Insulator band	–	–	–	
Injector mounting bolt	2	6	12 (1.2, 9)	
Bank angle sensor mounting screw	2	4	1.2 (0.12, 0.9)	
ECT sensor	1	12	25 (2.5, 18)	
O ₂ sensor	1	12	25 (2.5, 18)	See page 6-58
Intake pipe stud bolt	2	–	–	
PCV solenoid valve mounting bolt	2	5	6 (0.61, 4.4)	

COOLING SYSTEM

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Radiator drain bolt	1	10	1 (0.10, 0.7)	
Cooling fan bolt	3	6	8 (0.82, 5.9)	
Water pump impeller	1	6	10 (1.0, 7)	

ENGINE REMOVAL/INSTALLATION

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Engine hanger link pivot nut (Frame side)	1	10	69 (7.0, 51)	
Engine hanger link pivot nut (Engine side)	1	10	49 (5.0, 36)	

CYLINDER HEAD/VALVES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Cylinder head cover special bolt	2	6	12 (1.2, 9)	Apply engine oil to the threads and seating surface.
Camshaft holder nut	4	7	18 (1.8, 13)	
Cam sprocket socket bolt	2	5	8 (0.82, 5.9)	
Cam chain tensioner lifter screw	1	6	4 (0.41, 3.0)	

CYLINDER/PISTON

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Cylinder stud bolt	–	–	–	See page 10-7

DRIVE PULLEY/DRIVEN PULLEY/CLUTCH

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Drive pulley face nut	1	14	108 (11.0, 80)	Apply engine oil to the threads and seating surface.
Left crankcase cover air duct band	–	–	–	
Clutch/driven pulley nut	1	28	54 (5.5, 40)	See page 6-37
Clutch outer nut	1	12	49 (5.0, 36)	

ALTERNATOR

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Stator mounting socket bolt	3	6	10 (1.0, 7)	
Flywheel nut	1	12	59 (6.0, 44)	