

## GENERAL INFORMATION

### ELECTRIC STARTER

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Starter motor case screw	3	4	2 (0.20, 1.5)	

### LIGHTS/METERS/SWITCHES

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Ignition switch protector socket bolt	1	6	8.5 (0.87, 6.3)	One way bolt; replace with a new one.

### OTHERS

ITEM	Q'TY	THREAD DIA. (mm)	TORQUE N·m (kgf·m, lbf·ft)	REMARKS
Brake shoe anchor pin nut (When using the stake nut)	1	8	20(2.0, 15)	Stake after tightening.
(When using the normal nut)	1	8	18(1.8, 13)	
Centerstand spring bolt	1	8	22 (2.2, 16)	U-nut
Reflector mounting nut	1	5	1.7 (0.17, 1.3)	
Throttle cable lock nut (Throttle housing side)	1	10	1.5 (0.15, 1.1)	
Left crankcase cover plate screw	3	4	3 (0.31, 2.2)	
Crankcase breather hose joint plate screw	1	4	3 (0.31, 2.2)	