

SERVICE INFORMATION

GENERAL

- This section covers removal and installation of the body panels and exhaust system.
- When installing the body panels, make sure the mating areas are aligned properly before tightening the fasteners.
- Always replace the exhaust pipe gasket after removing the exhaust pipe from the engine.
- When installing the exhaust system, loosely install all of the fasteners. Always tighten the exhaust joint first, then tighten the mounting fasteners. If you tighten the mounting fasteners first, the exhaust pipe may not seat properly.
- Always inspect the exhaust system for leaks after installation.

TORQUE VALUES

Front fender mounting bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)	Apply locking agent to the threads.
Floor panel mounting bolt	7 N·m (0.71 kgf·m, 5.2 lbf·ft)	
Exhaust pipe joint nut	14 N·m (1.4 kgf·m, 10 lbf·ft)	
Muffler mounting bolt	59 N·m (6.0 kgf·m, 44 lbf·ft)	

TROUBLESHOOTING

Excessive exhaust noise

- Broken exhaust system
- Exhaust gas leak

Poor performance

- Deformed exhaust system
- Exhaust gas leak
- Clogged muffler