


Remove the screw.

Release the four tabs and hook of the side body cover from the slots by slightly pulling the cover backward.

Remove the side body cover.

Installation is in the reverse order of removal.

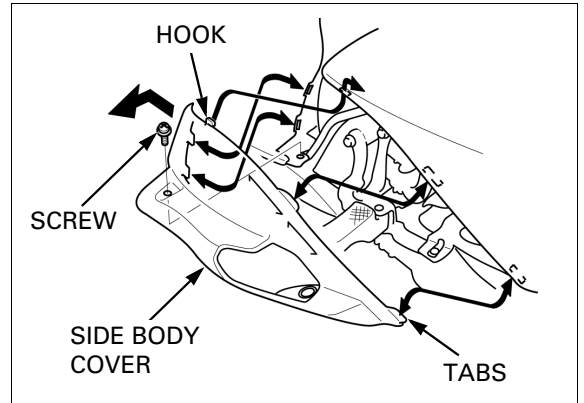

FLOOR PANEL SIDE COVER

REMOVAL/INSTALLATION

Remove the side body cover (page 3-4).

Remove the bolt and screws.

Release the following:

- Tabs of the front side
- Hole of the rear side from the frame
- Three hooks by slightly pulling the cover forward

Remove the floor panel side cover.

Installation is in the reverse order of removal.

