


## FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the two bolts.

Release the both side boss of the body cover from the holes.

Remove the body cover with disconnect the rear combination light 6P connector.

Installation is in the reverse order of removal.

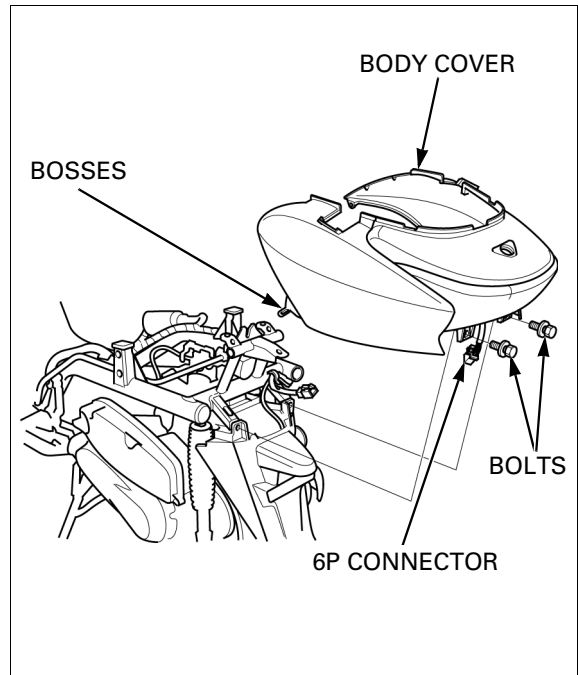

### DISASSEMBLY/ASSEMBLY

#### RIGHT/LEFT BODY COVER

Remove six screws and right/left body cover by releasing the tabs from the slots.

#### REAR UPPER BODY COVER

Remove two screws.

Remove rear center body cover by releasing the tabs from the cover slots.

Assembly is in the reverse order of disassembly.

