MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult an authorized Honda dealer.

| | FREQUENC | WHICHEVER COMES | | | | | | |
|-------|----------------------------|--------------------|-----------------|-----------------|-----|----|------|------------------|
| | | FIRST | X 1,000 km | 1 | 4 | 8 | 12 | REFER TO PAGE |
| | | Ţ | X 1,000 mi | 0.6 | 2.5 | 5 | 7.5 | |
| ITEMS | | | MONTH | | 6 | 12 | 18 | |
| | | | | | | | | |
| | | NOTE | | | | | | |
| * | FUEL LINE | | | | I | Ι | Ι | 4-5 |
| * | THROTTLE OPERATION | | | | I | Ι | Ι | 4-5 |
| | AIR CLEANER | NOTE 2 | | EVERY 16,000 km | | | | 4-6 |
| | | | | (10,000 mi) R | | | | |
| | CRANKCASE BREATHER | NOTE 3 | | | С | С | С | 4-7 |
| | SPARK PLUG | | | | | R | | 4-8 |
| * | VALVE CLEARANCE | | | I | I | Ι | Ι | 4-9 |
| | ENGINE OIL | | | R | | R | | 4-10 |
| * | ENGINE OIL STRAINER SCREEN | | | | | | С | 4-12 |
| | ENGINE IDLE SPEED | | | I | Ι | Ι | Ι | 4-13 |
| | RADIATOR COOLANT | NOTE 4 | | | | Ι | | 4-13 |
| * | COOLING SYSTEM | | | | | Ι | | 4-14 |
| * | DRIVE BELT | | | EVERY 8,000 km | | | 4-14 | |
| | | | | (5,000 mi) l, | | | | |
| | | | EVERY 24,000 km | | | | | |
| | | | | (1,5000 mi) R | | | | |
| * | FINAL DRIVE OIL | NOTE 4 | | | | | | 4-15 |
| | BRAKE FLUID | NOTE 4 | | | I | I | Ι | 4-16 |
| | BRAKE SHOES/PADS WEAR | | | | I | I | Ι | 4-16 |
| | BRAKE SYSTEM | | | I | I | I | I | 4-17 |
| * | BRAKE LIGHT SWITCH | | | | I | I | Ι | 4-20 |
| * | BRAKE LOCK OPERATION | | | I | I | I | Ι | 4-20 |
| * | HEADLIGHT AIM | | | | I | I | I | 4-20 |
| ** | CLUTCH SHOES WEAR | | | | | I | | 4-21 |
| * | SUSPENSION | | | | Ι | Ι | | 4-21 |
| * | NUTS, BOLTS, FASTENERS | | | I | | I | | 4-22 |
| ** | WHEELS/TIRES | | | | | I | Ι | 4-22 |
| ** | STEERING HEAD BEARINGS | | | Ι | | | Ι | 4-24 |

* SHOULD BE SERVICED BY AN AUTHORIZED Honda DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SER-VICE DATA AND IS MECHANICALLY QUALIFIED.

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED Honda DEALER.

Honda recommends that an authorized Honda dealer should road test the scooter after each periodic maintenance is carried out.

NOTES:

- 1. At higher odometer readings, repeat at the frequency interval established here.
- 2. Service at every 16,000 km (10,000 mi) or more frequently when riding in unusually wet or dusty areas. (cleaning is prohibited)
- 3. Service more frequently when riding in rain or at full throttle.
- 4. Replace every 2 years. Replacement requires mechanical skill.