

MAINTENANCE

Throttle grip freeplay can be adjusted at either end of the throttle cable. Minor adjustments are made with the upper adjuster.

Loosen the lock nut and turn the adjuster as required.

Tighten the lock nut.

- An O-ring is incorporated in the root part of adjusting nut. Do not disassemble the throttle cable as it could damage the O-ring. If damaged, moisture gets inside the cable, preventing the smooth cable operation.

Major adjustments are made with the lower adjuster.



Remove the luggage box (page 3-8).

Loosen the lock nut, turn the adjusting nut as required and tighten the adjusting nut and lock nut.

TORQUE: 8.5 N·m (0.87 kgf·m, 6.3 lbf·ft)

Recheck the throttle operation.

Install the removed parts in the reverse order of removal.

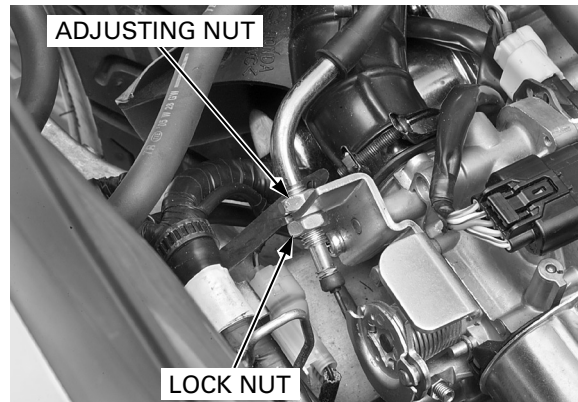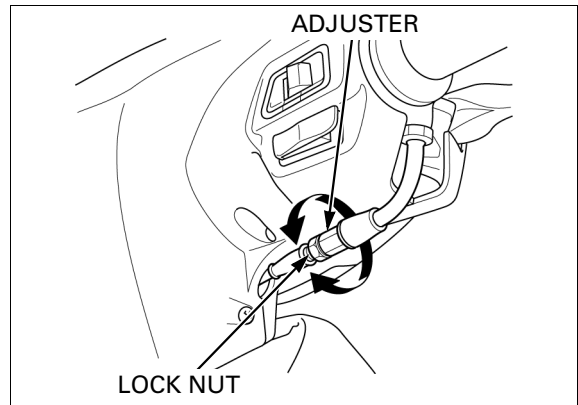

AIR CLEANER

- The viscous paper element type air cleaner cannot be cleaned because the element contains a dust adhesive.
- If the scooter is used in unusually wet or dusty areas, more frequent inspections are required.

Remove the left side body cover (page 3-4).

Remove the seven screws and air cleaner housing cover.

