


MAINTENANCE

COOLING SYSTEM

Remove the following:


- Side body cover (page 3-4)
- Luggage box (page 3-8)
- Radiator cover (page 3-13)

Check the radiator for leakage.
Check for coolant leakage from the water pump, water pipe, water hoses and hose joints.
Check the water hoses for cracks or deterioration and replace if necessary.
Check that all hose clamps are tight.

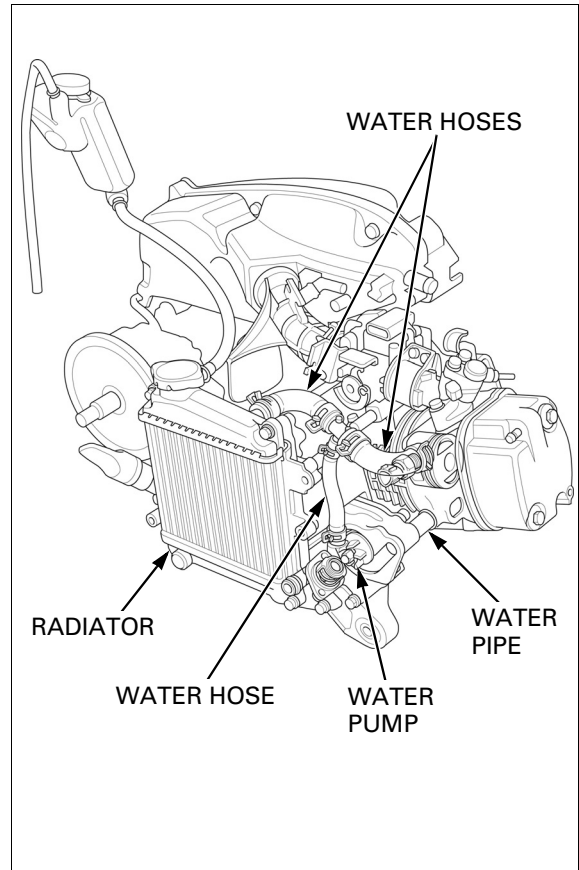

Check the radiator air passage for clogs or damage. Straighten bent fins with a small, flat blade screwdriver and remove insects, mud or other obstructions with compressed air or low pressure water. Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

Install the removed parts in the reverse order of removal.

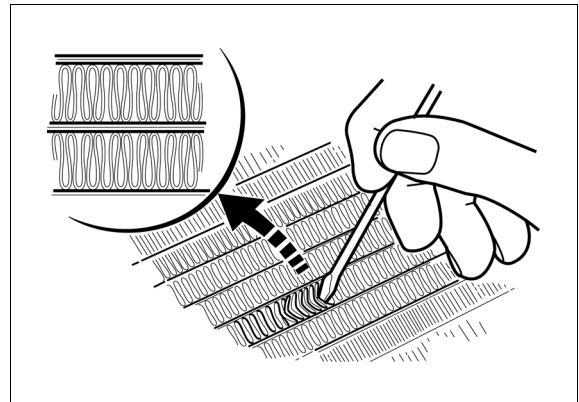

DRIVE BELT

Remove the drive belt (page 11-6).

Check the drive belt for cracks, separation or abnormal or excessive wear and replace it if necessary (page 4-2).

Measure the drive belt width.

SERVICE LIMIT: 17.5 mm (0.69 in)

Replace the drive belt if it is less than the service limit (page 11-6).

Install the drive belt (page 11-6).

