


MAINTENANCE

BRAKE LIGHT SWITCH

- The brake light switch on the brake lever cannot be adjusted. If the brake light switch actuation and brake engagement are not synchronized, either replace the switch or malfunction parts of the system.

Check that the brake light comes on just prior to the brake actually being engaged.


Refer to brake light switch inspection (page 21-13).

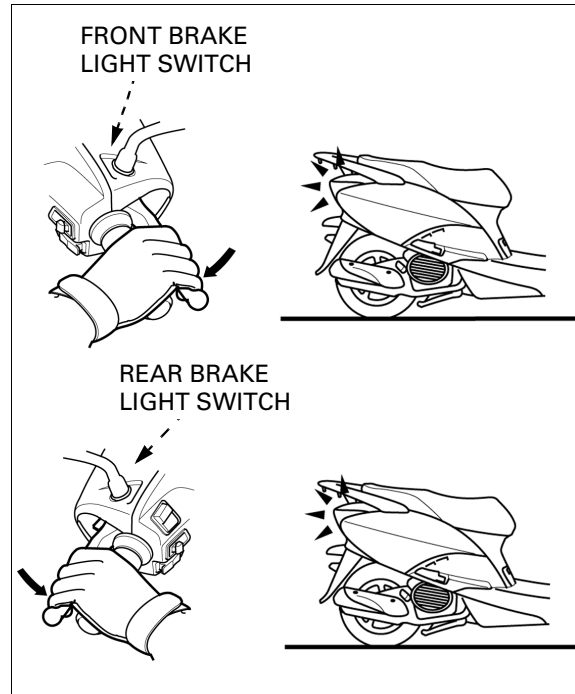

BRAKE LOCK OPERATION

Check the brake lock operation after the rear brake lever freeplay is checked and adjusted (page 4-17).

Squeeze the rear brake lever and set the lock lever by pulling it up. Check that the rear wheel is locked.

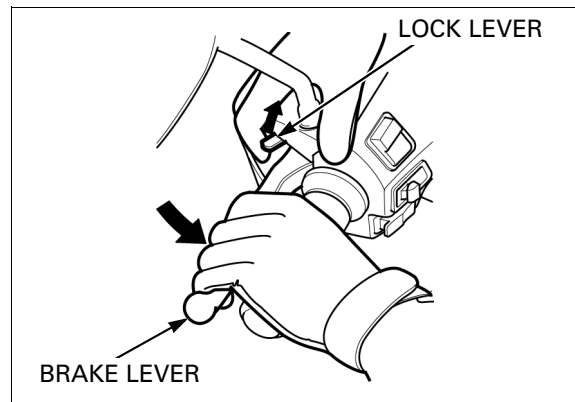

HEADLIGHT AIM

Place the scooter on a level ground.

Adjust the headlight beam as specified by local laws and regulations.

Adjust the headlight beam vertically by loosening the headlight aim adjusting bolt. Hold the headlight and tighten the adjusting bolt.

TORQUE: 1.8 N·m (0.18 kgf·m, 1.3 lbf·ft)

