


## MAINTENANCE

Support the scooter with its centerstand.

Check for worn engine mounting bushings by grabbing the engine and attempting to move it side to side.

Replace the parts if any looseness is noted (page 8-6).

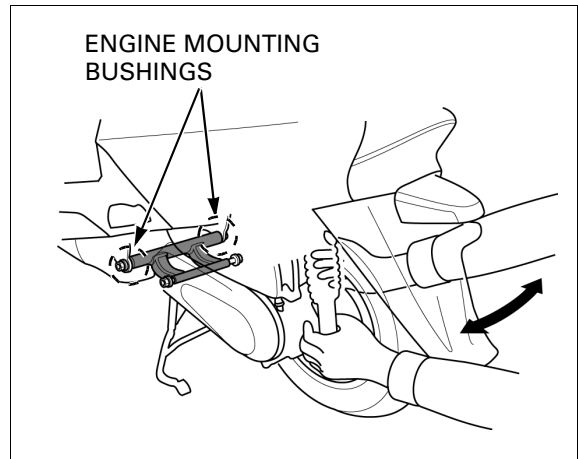

## NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to their correct torque values (page 1-11).

Check that all cotter pins, safety clips, hose clamps and cable stays are in place and properly secured.

## WHEELS/TIRES

Support the scooter with its centerstand.

Making sure that the fork is not allowed to move, raise the front wheel and check for play.

Check for worn front wheel bearings by grabbing the front wheel and attempting to move the wheel side to side.

Replace the front wheel bearings if any looseness is noted (page 15-6).

Turn the wheel and check that it rotates smoothly with no unusual noises.

If any abnormal conditions are suspected, inspect the front wheel bearings (page 15-6).

