


## MAINTENANCE

### STEERING HEAD BEARINGS

Support the scooter with its centerstand and raise the front wheel off the ground.

Check that the handlebar moves freely from side-to-side.

If the handlebar moves unevenly or binds, inspect the steering head bearings (page 15-23).

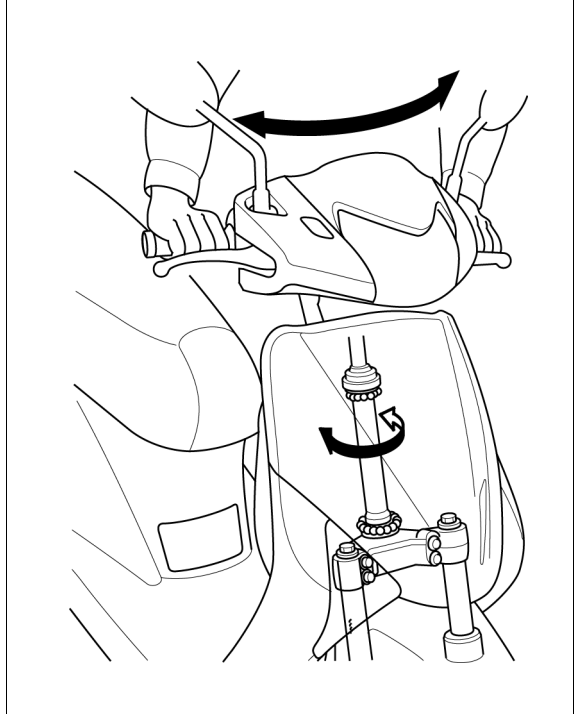

Hold the scooter and check the steering head bearings for wear by moving the fork forward and backward.

If the steering stem has vertical movement, inspect the steering head bearings (page 15-23).

