

## THROTTLE BODY

### REMOVAL


Remove the luggage box (page 3-8).

Loosen the throttle cable lock nut.

Release the throttle cable from the cable bracket.

Disconnect the throttle cable from the throttle drum.

*Be careful not to damage the threads of throttle cable.*

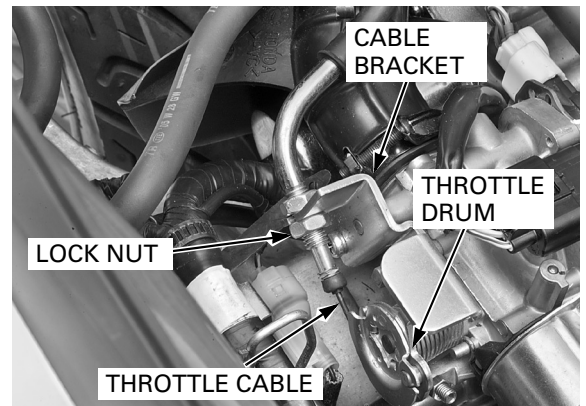


Disconnect the sensor unit 5P connector and IACV 4P connector.

Loosen the connecting hose band screw and insulator band bolts.

Remove the throttle body.


- Seal the intake pipe with a shop towel or cover it with a piece of tape to prevent any foreign material from dropping into the engine.

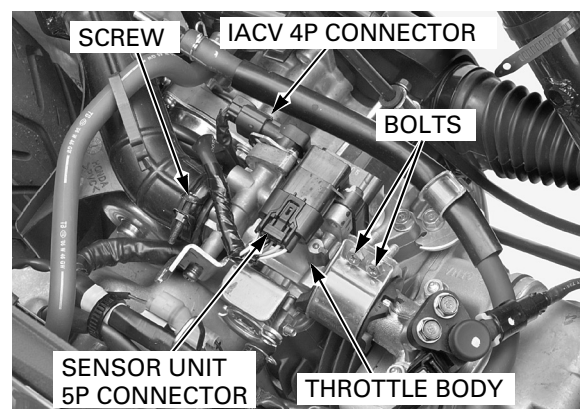

### INSTALLATION

Install the throttle body between the connecting hose and insulator band.

Connect the sensor unit 5P connector and IACV 4P connector.

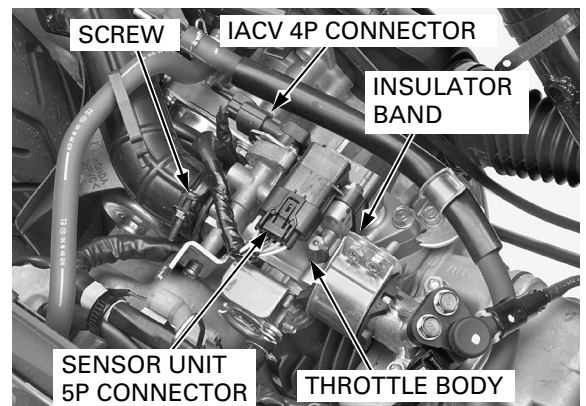

Align the throttle body tab and intake pipe tab with insulator band grooves.

Tighten the insulator band bolts until the band seats on the collar as shown.

