


FUEL SYSTEM (Programmed Fuel Injection)

Install the set plate by aligning the tab of the IACV with the slot of set plate as shown.


Install and tighten the torx screws to the specified torque.

TORQUE: 2.1 N·m (0.2 kgf·m, 1.5 lbf·ft)

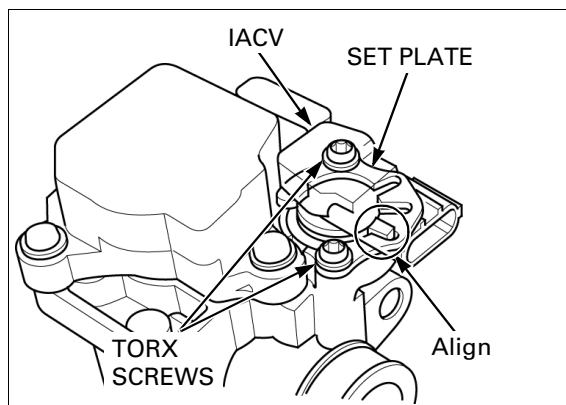

TP SENSOR RESET PROCEDURE


1. Remove the following:
 - Front center cover (page 3-4)
 - Side body cover (page 3-4)
2. Turn the ignition switch "OFF".
3. Remove the DLC from the connector cover.

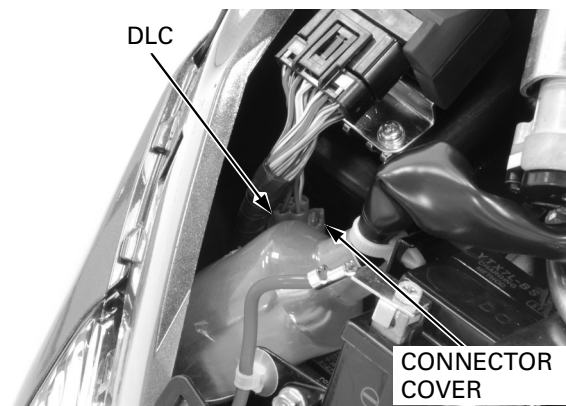

4. Connect the special tool to the DLC.

TOOL:

DLC short connector 070PZ-ZY30100

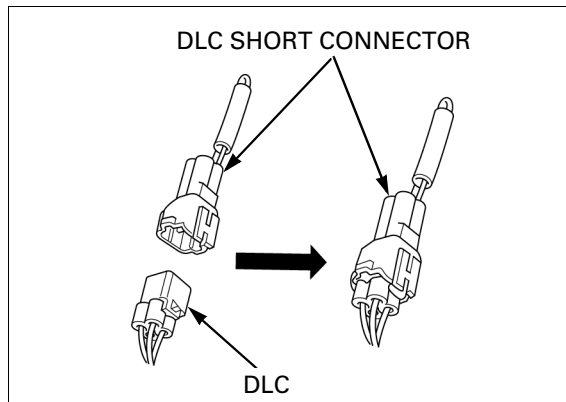

5. Disconnect the ECT sensor 3P connector.
Short the ECT sensor terminals with jumper wire.
CONNECTION: Pink/White – Green/Orange

