


Connect the bank angle sensor 6P (Black) connector and clamp the bank angle sensor wire.

Install the body cover (page 3-9)

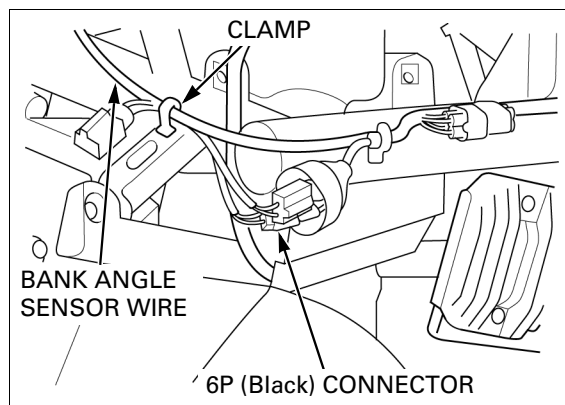

SYSTEM INSPECTION


Turn the ignition switch "OFF".

Remove the following:

- Front center cover (page 3-4)
- Luggage box (page 3-8)

Do not disconnect the bank angle sensor connector during inspection.

Remove the two screws and bank angle sensor.

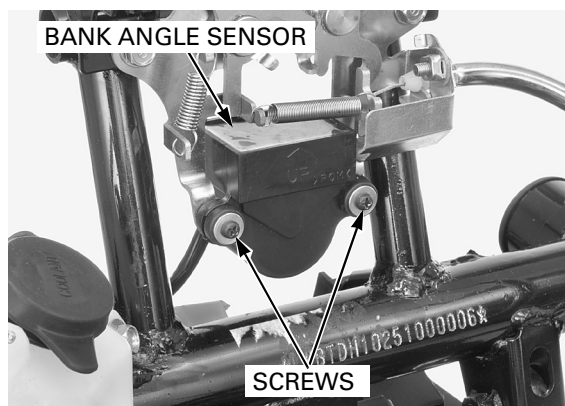

If you perform this test, turn the ignition switch "OFF", then turn the ignition switch "ON".

Place the bank angle sensor in normal position as shown, and turn the ignition switch "ON". The bank angle sensor is normal if the engine stop relay clicks, which indicates that circuit is closed.

Incline the bank angle sensor approximately $49 \pm 4^\circ$ to the left or right while the ignition switch is "ON". The bank angle sensor is normal if the engine stop relay clicks, which indicates that circuit is opened.

If the bank angle sensor does not operate, refer to the circuit inspection (page 6-52), if the circuit inspection is normal, replace the bank angle sensor with a new one and recheck.

