

FUEL SYSTEM (Programmed Fuel Injection)

O₂ SENSOR

NOTICE

- Do not get grease, oil or other materials in the O₂ sensor air hole.
- The O₂ sensor may be damaged if dropped. Replace it with a new one, if dropped.
- If the O₂ sensor cap is disconnected, replace the O₂ sensor cord with a new one, do not reuse O₂ sensor cord.


REMOVAL

Replace the O₂ sensor while the engine is cold.


Remove the following:

- Luggage box (page 3-8)
- Floor panel side cover (page 3-5)

Disconnect the O₂ sensor 2P connector.

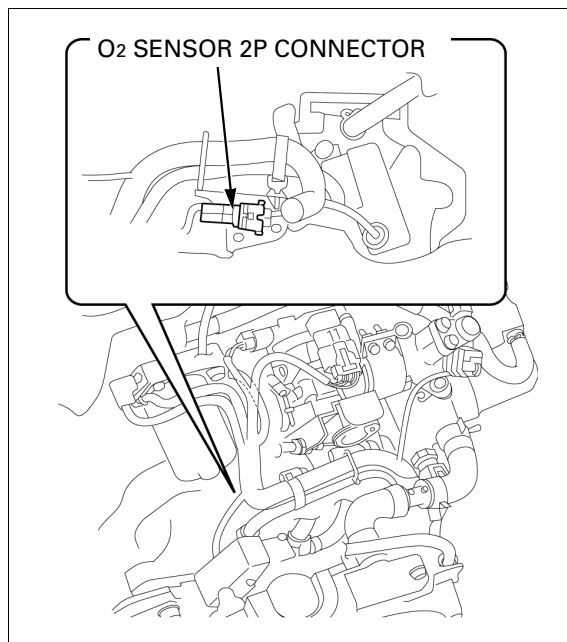

Remove the O₂ sensor cap.
Discard the O₂ sensor cord.

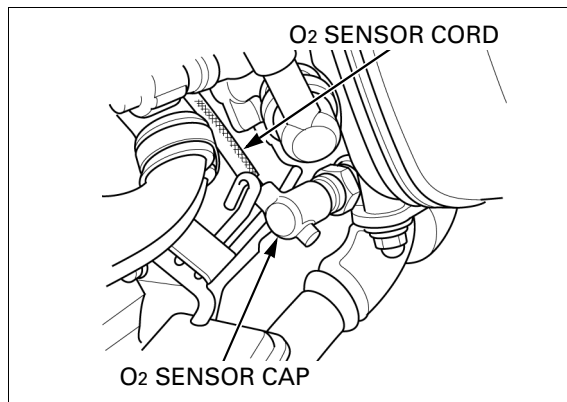

Remove the O₂ sensor from the cylinder head.

