


INSTALLATION

Install and tighten the O₂ sensor to the cylinder head to the specified torque.


TORQUE: 25 N·m (2.5 kgf·m, 18 lbf·ft)

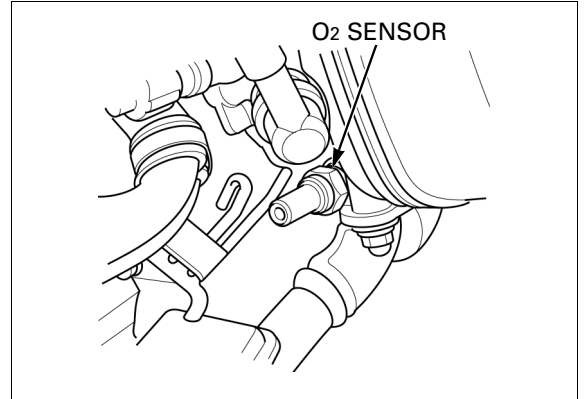

Connect the O₂ sensor cap by installing a new O₂ sensor cord between the wire guide legs.

NOTICE

- Take care not to tilt the O₂ sensor cap when connecting the cap to the O₂ sensor.
- Do not turn the O₂ sensor cap, after connecting it.

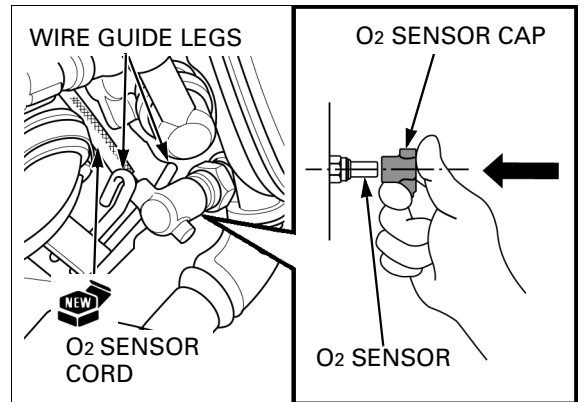

Connect the O₂ sensor 2P connector.

After installation, make sure the exhaust gas does not leak.

Install the following:

- Floor panel side cover (page 3-5)
- Luggage box (page 3-8)

