


## FUEL SYSTEM (Programmed Fuel Injection)

### PCV CHECK VALVE


#### INSPECTION

Remove the throttle body (page 6-41).

Remove the bolts and PCV check valve cover.

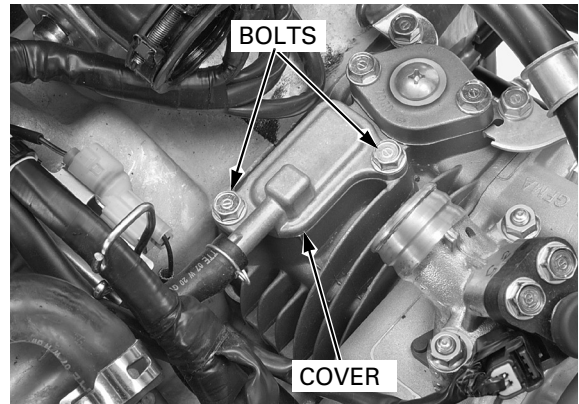

Remove the check valve from the cylinder.

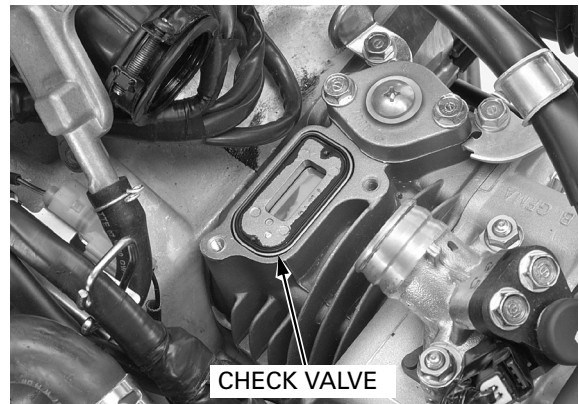

Check the reed for damage or fatigue. Replace if necessary.

Replace the PCV check valve if the rubber seat is cracked, deteriorated or damaged, or if there is clearance between the reed and seat.

Installation is in the reverse order of removal.

