

COOLING SYSTEM

INSTALLATION


Install the cooling fan.

Install and tighten the bolts to the specified torque.

TORQUE: 8 N·m (0.82 kgf·m, 5.9 lbf·ft)

Install the dowel pins.


Install a new O-ring.

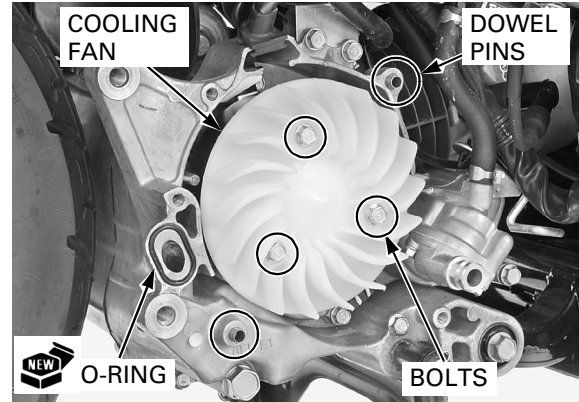

Install the radiator base and bolts.

Install the following:

- Radiator (page 7-10)
- PCV solenoid valve (page 6-58)
- Exhaust pipe/muffler (page 3-13)
- Oil filler cap/dipstick (page 4-11)

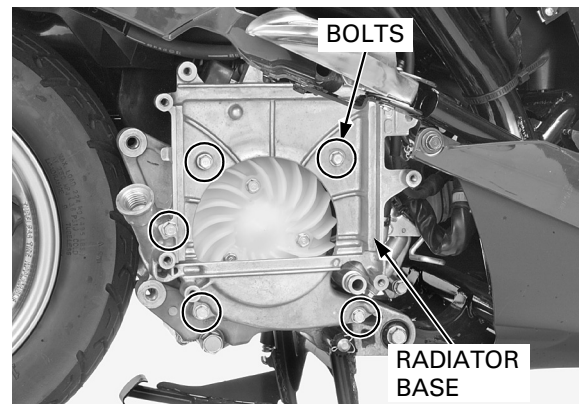

RADIATOR RESERVE TANK


REMOVAL/INSTALLATION

Remove the luggage box (page 3-8).

Pinch the siphon hose using a hose clamp.

Disconnect the siphon hose from the radiator.

Remove the hose clamp and drain the coolant into the approved pan.

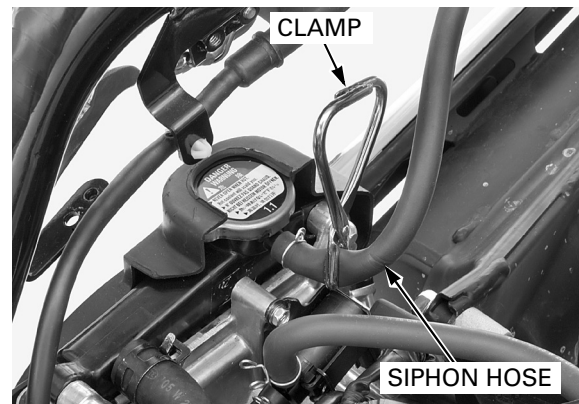

Disconnect the reserve tank overflow hose.

Remove the bolts and reserve tank.

Installation is in the reverse order of removal.

Fill the reserve tank with the recommended coolant to the upper level line.

RECOMMENDED COOLANT:
Honda PRE-MIX COOLANT

After installation, make sure the coolant does not leak.

Make sure that the hose clips are installed in the correct direction (page 1-17).

