



THERMOSTAT

REMOVAL

Remove the radiator base (page 7-11).
Remove the bolts and thermostat cover.

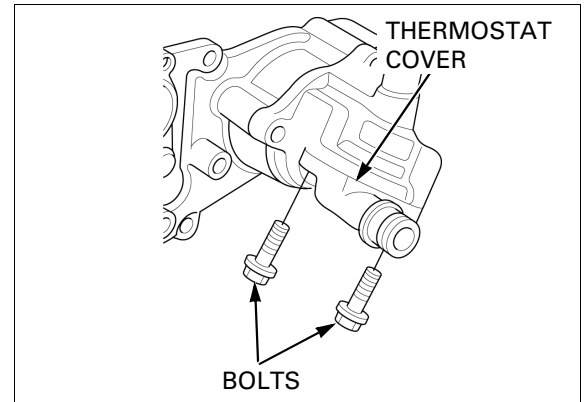

Remove the dowel pins.

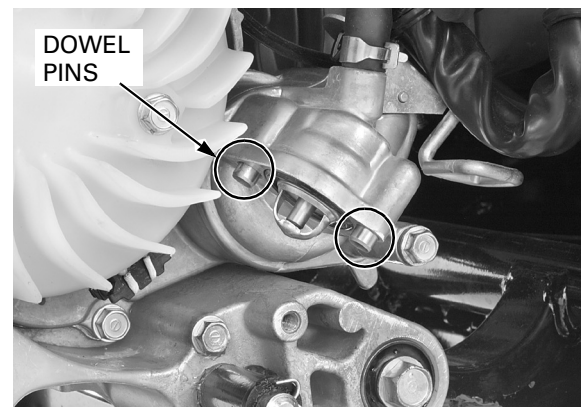

Remove the thermostat.

