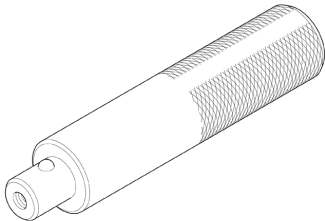
 

 


## DRIVE PULLEY/DRIVEN PULLEY/CLUTCH

<p>Driver 07749-0010000</p> 	<p>Pilot, 28 mm 07746-0041100</p> 	<p>Attachment, 28 x 30 mm 07946-1870100</p> 
<p>Pilot, 20 mm 07746-0040500</p> 		

## TROUBLESHOOTING

### Engine starts but scooter won't move

- Worn drive belt
- Worn or damaged clutch shoe
- Broken driven face spring

### Engine stalls or scooter creeps

- Broken clutch shoe spring

### Poor performance at high speed or lack of power

- Worn drive belt
- Weak driven face spring
- Worn weight rollers
- Contaminated pulley faces