


## DRIVE PULLEY/DRIVEN PULLEY/CLUTCH

### INSTALLATION


Apply 0.1 – 0.3 g of grease (SHIN-NIHON POWER-NOC WB3 or equivalent) to the ends of the starter pinion.

Install the starter pinion into the left crankcase.

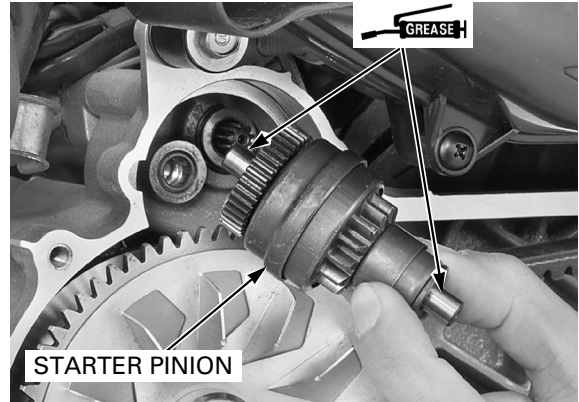

Install the starter pinion holder.

Install the left crankcase cover (page 11-5).

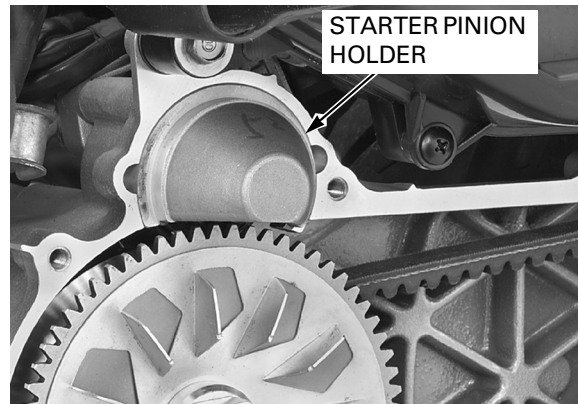


## DRIVE PULLEY

### REMOVAL

Remove the starter pinion (page 11-7).

Remove the air cleaner housing bolts.

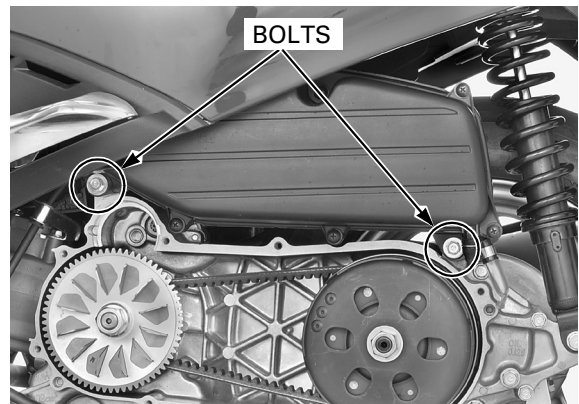

*Set the special tool lifting the air cleaner housing.*

Hold the drive pulley face with special tool and loosen the drive pulley face nut.

#### TOOL:

**Clutch center holder**

**07724-0050002**

Remove the following:

- Nut
- Drive face flange
- Drive face fin
- Drive pulley face

