



DRIVE PULLEY/DRIVEN PULLEY/CLUTCH

Install the drive face fin while aligning its splines with crankshaft splines.

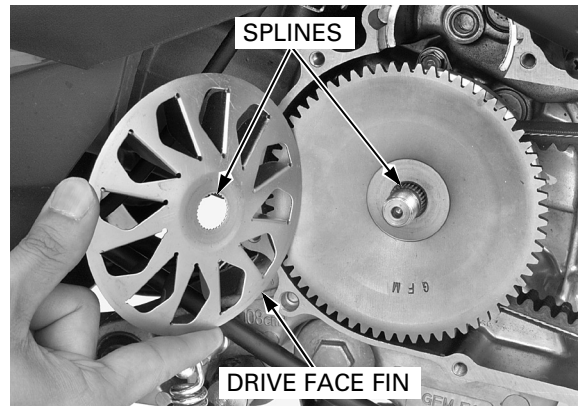

Install the drive face flange with the tapered side facing out.
Apply engine oil to the drive pulley face nut threads and seating surface then install it.

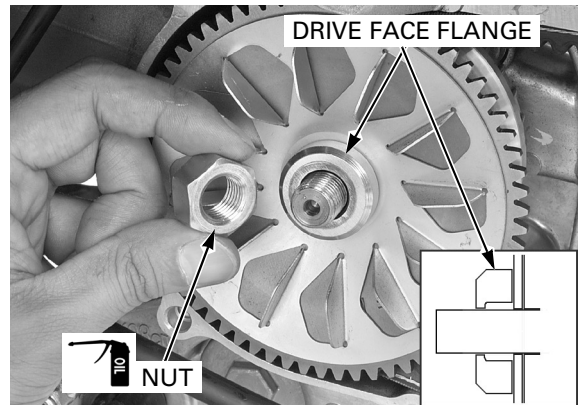


Hold the drive pulley face with the special tool and tighten the nut to the specified torque.

TOOL:

Clutch center holder 07724-0050002

TORQUE: 108 N·m (11.0 kgf·m, 80 lbf·ft)

Install the left crankcase cover (page 11-5).

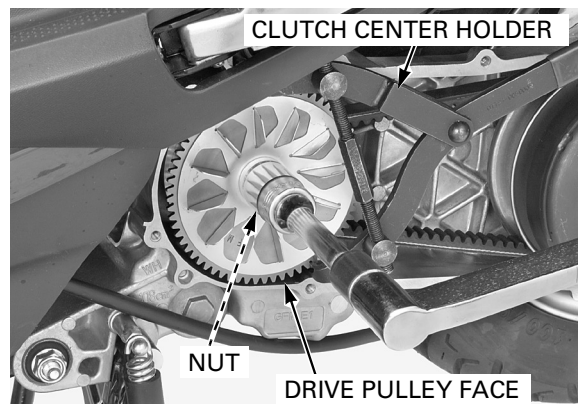

Install the air cleaner housing bolts and tighten them.

Install the starter pinion (page 11-7).

