

CLUTCH/DRIVEN PULLEY

REMOVAL

- The clutch/driven pulley can be serviced with the engine installed in the frame.


Remove the left crankcase cover (page 11-5).

Hold the clutch outer with the special tool and remove the nut.


TOOL:

Flywheel holder 07725-0040001

Remove the washer and clutch outer.

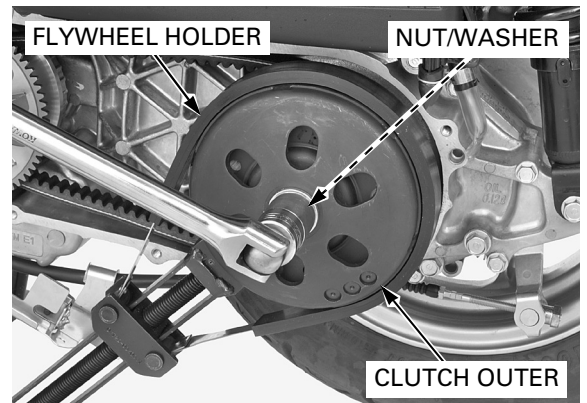

Hold the clutch/driven pulley assembly and compress the driven face spring by turning movable driven face clockwise until it is set in lock position.

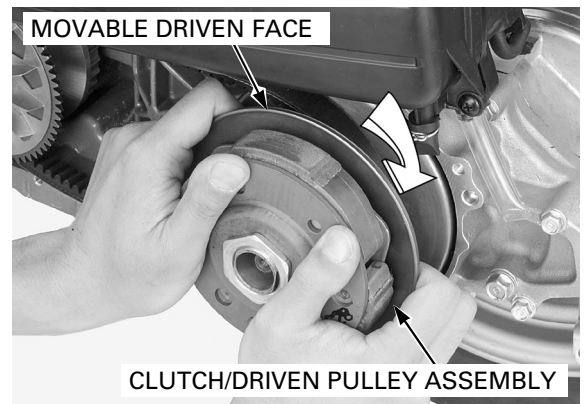

Remove the clutch/driven pulley assembly from the drive belt by holding the movable driven face.

