


DRIVEN PULLEY

Apply grease to new oil seal lips and install them into the movable driven face.


Coat new O-rings with engine oil and install them into the movable driven face grooves.

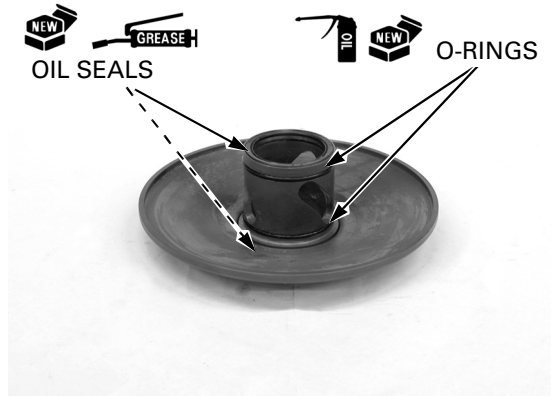

Clean any oil and grease from the pulley face.

Install the movable driven face onto the driven face. Install the guide rollers and guide pins.

Apply 2.0 – 2.5 g of grease (Shell ALVANIA R3 or IDEMITSU AUTOREX B or SHIN-NIHON POWER-NOC WB3 or equivalent) to each guide groove.

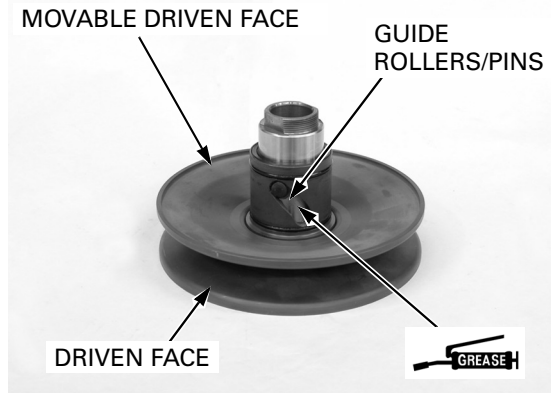

Install the seal collar to the driven pulley.



CLUTCH

Install the damper rubbers onto the drive plate.

