


## DRIVE PULLEY/DRIVEN PULLEY/CLUTCH


Install the clutch/driven pulley assembly onto the drive shaft.

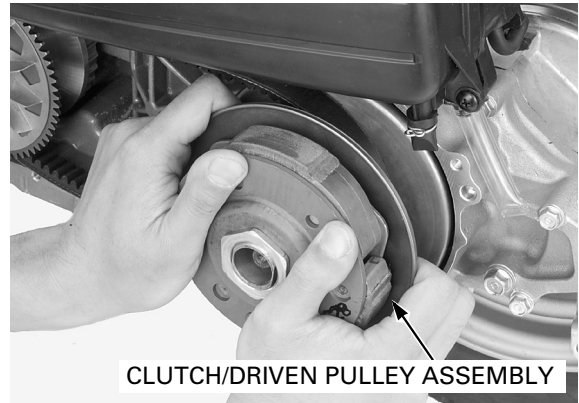

Clean any oil and grease from the clutch outer.

Degrease the drive shaft threads and splines, being careful not to remove grease from driven pulley inside.

Install the clutch outer while aligning its splines with driveshaft splines.

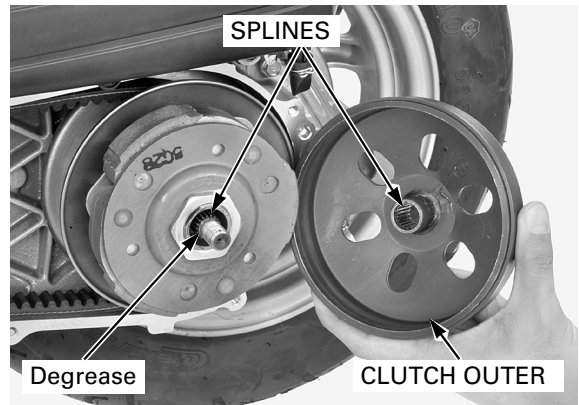

Install the washer and clutch outer nut.

Hold the clutch outer with the special tool and tighten the clutch outer nut to the specified torque.

**TOOL:**

**Flywheel holder** 07725-0040001

**TORQUE: 49 N·m (5.0 kgf·m, 36 lbf·ft)**

Install the left crankcase cover (page 11-5).

