
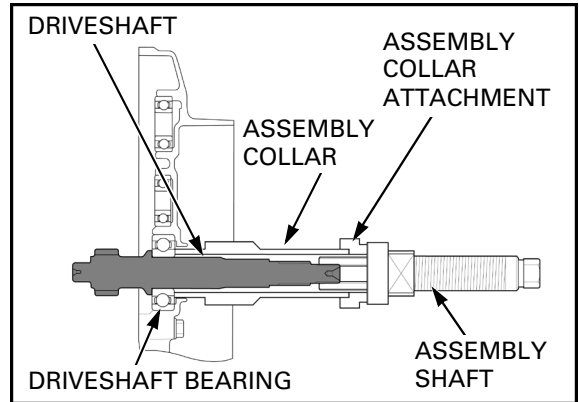


FINAL REDUCTION

Install the driveshaft into the bearing.
Position the assembly collar on the driveshaft bearing inner race and pull the drive shaft into the bearing until it is fully seated.

TOOLS:

Assembly shaft	07965-1660200
Assembly collar	07965-GM00100
Assembly collar attachment	07965-GM00200

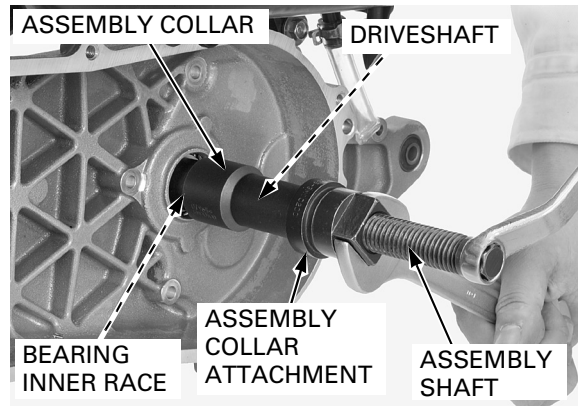

Apply engine oil to a new driveshaft oil seal lip.

Do not insert the oil seal too far. Install the driveshaft oil seal with its marked side facing up until it is flush with the left crankcase, using the special tools.

TOOLS:

Assembly shaft	07965-1660200
Assembly collar	07965-GM00100
Assembly collar attachment	07965-GM00200

