

## SERVICE INFORMATION

### GENERAL

- This section covers the removal and installation of the flywheel, alternator and CKP sensor.
- These service can be done with the engine installed in the frame.
- Inspect the followings:
  - Alternator (page 18-7)
  - CKP sensor (page 19-6)

### TORQUE VALUES

Stator mounting socket bolt	10 N·m (1.0 kgf·m, 7 lbf·ft)
Flywheel nut	59 N·m (6.0 kgf·m, 44 lbf·ft)

### TOOLS

