

CRANKCASE/CRANKSHAFT

Lift the cam chain off the timing sprocket on the crankshaft as shown, using a screwdriver.

Hold the cam chain off the timing sprocket and remove the crankshaft from the left crankcase using the case puller.

Remove the cam chain.

TOOL:

Case puller

07SMC-0010001

