



FRONT WHEEL/SUSPENSION/STEERING

Visually inspect the guide bushing in the fork slider. Replace the fork slider if there is excessive scoring or scratching, or if the teflon is worn so that the copper surface appears on more than 3/4 of the entire surface.

Check the back-up ring; replace it if there is any distortion at the points shown.

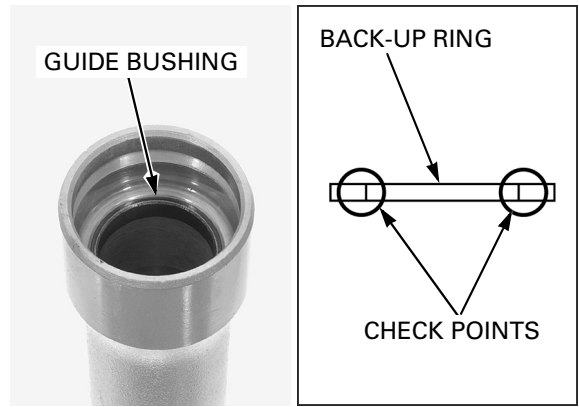

ASSEMBLY

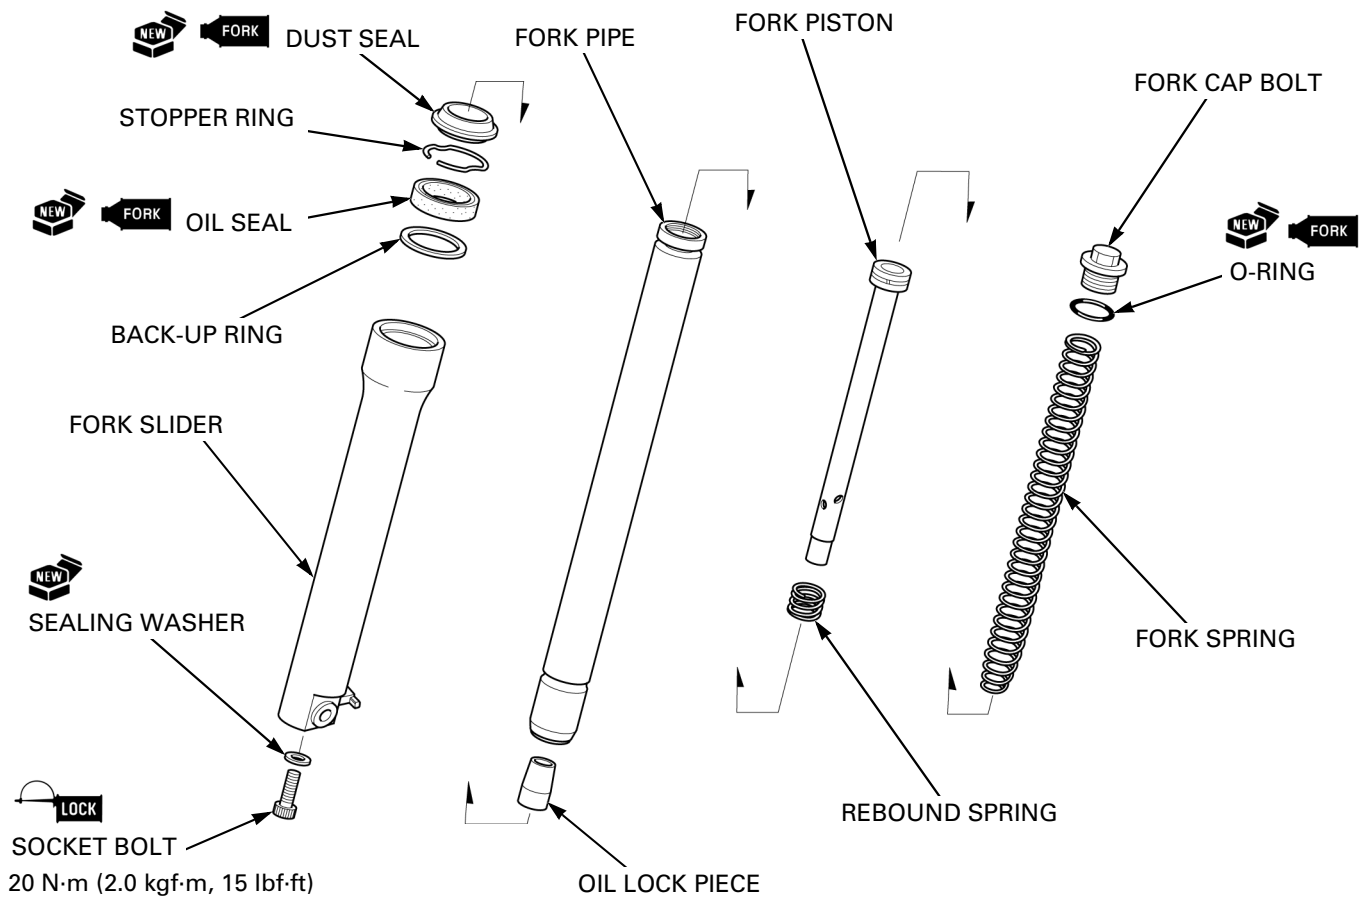

Before assembly, wash all parts with high flash point or non-flammable solvent and wipe them dry. Install the rebound spring and fork piston into the fork pipe.

