


FRONT WHEEL/SUSPENSION/STEERING

Apply engine oil to the handlebar post nut seating surface and the bolt threads as shown. Install the bolt, collars and nut as shown. Tighten the nut to the specified torque.

TORQUE: 33 N·m (3.4 kgf·m, 24 lbf·ft)

Secure the cables with the handlebar clamp.

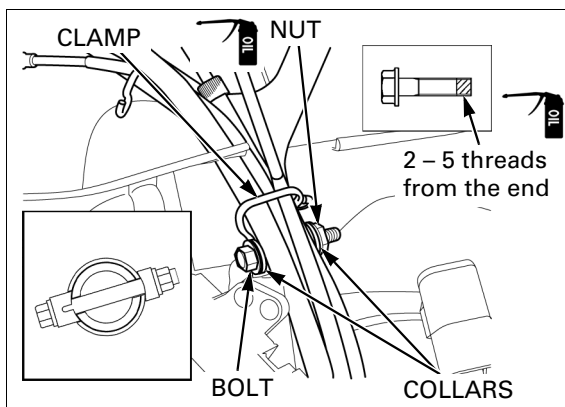


Route the cables properly (page 1-17).

HANDLEBAR GRIP

Apply Honda Bond A or equivalent to the inside of the grip and to the clean surfaces of the left handlebar.

Allow the adhesive to dry for 1 hour before using.

Wait 3 – 5 minutes and install the grip. Rotate the grip for even application of the adhesive.

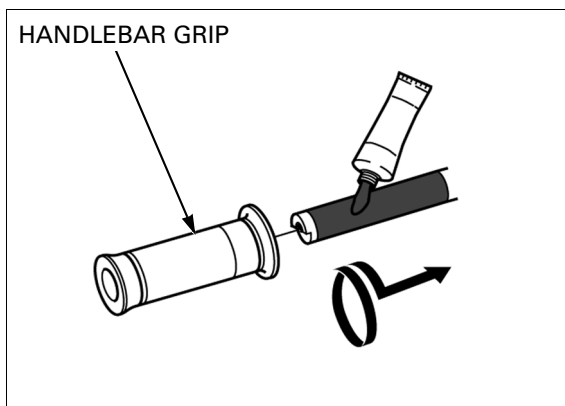


COMBINED BRAKE EQUALIZER

Align the boss of the rear brake lever bracket with the hole of the handlebar and install the rear brake lever bracket.

Hook the bracket holder to the tab of the rear brake lever bracket while holding the brake lever bracket.

Install and tighten the brake lever bracket holder bolt.

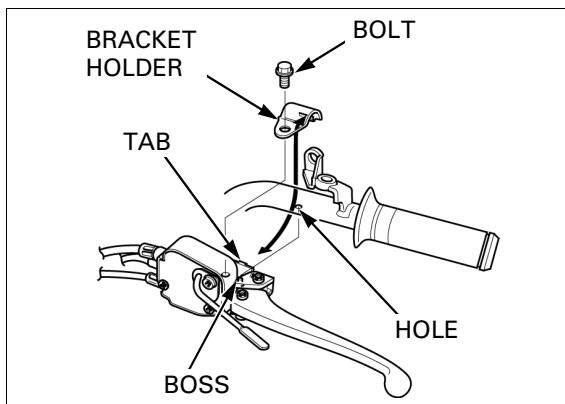

THROTTLE HOUSING

Install the throttle pipe to the right handlebar.

Apply 0.1 – 0.2 g of grease to the throttle cable sliding area and end or seat area.

Connect the throttle cable to the throttle pipe.

Install the lower throttle housing by aligning the hole on the handlebar with the locating pin of the lower throttle housing.

