


BRAKE SYSTEM

BRAKE PAD/DISC


BRAKE PAD REPLACEMENT

Check the fluid level in the master cylinder reservoir as this operation causes the fluid level to rise.


Push the caliper pistons all the way in by pushing the caliper body inward to allow installation of new brake pads.

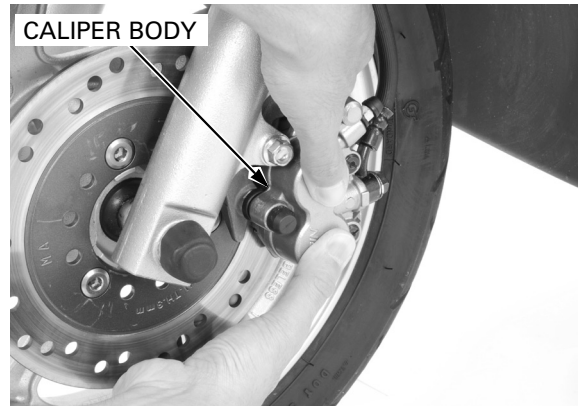

Remove the brake pad pin plugs. Loosen the brake pad pins.

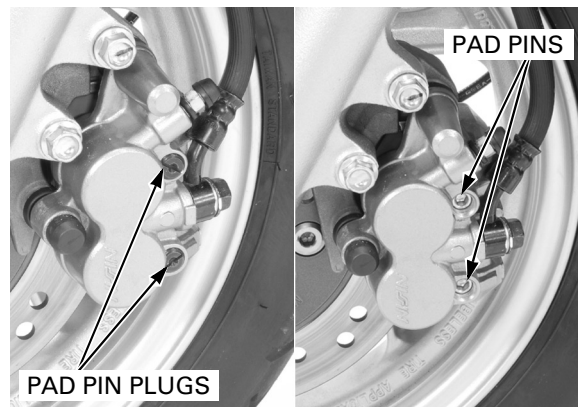

Remove the mounting bolts and remove the brake caliper from the brake disc.

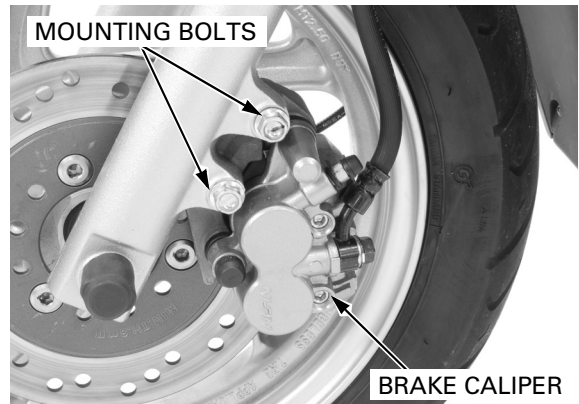

Remove the pad pins and brake pads.

