


Remove the pad spring.

Clean the inside of the caliper especially around the caliper pistons.


Install the pad spring as shown.

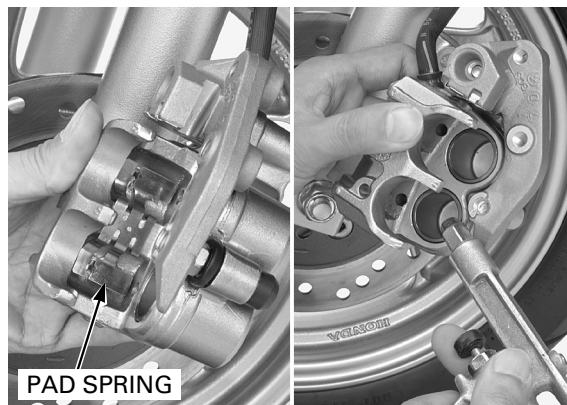

*Always replace the brake pads in pairs to assure even disc pressure.*

Install new brake pads.


Install the pad pins by pushing the pads against the pad spring to align the pad pin holes on the pads and caliper.

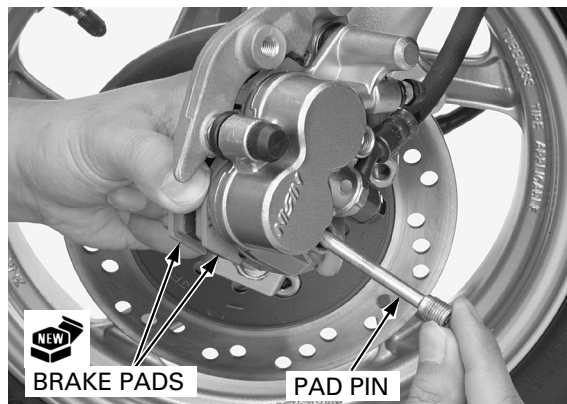

Install the brake caliper to the left fork by setting the brake disc between the pads.

Install and tighten new brake caliper mounting bolts to the specified torque.

**TORQUE: 30 N·m (3.1 kgf·m, 22 lbf·ft)**

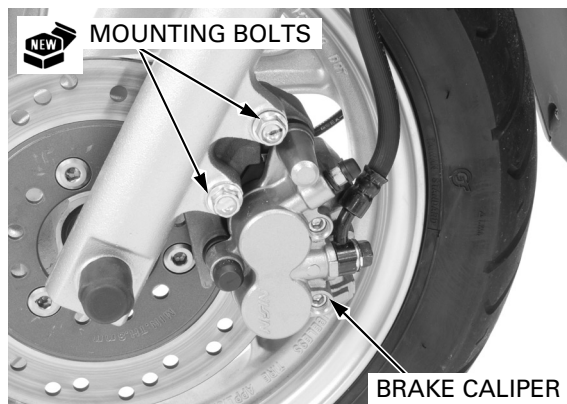

Tighten the brake pad pins to the specified torque.

**TORQUE: 17.2 N·m (1.8 kgf·m, 13 lbf·ft)**

Install and tighten the brake pad pin plugs to the specified torque.

**TORQUE: 2.4 N·m (0.25 kgf·m, 1.8 lbf·ft)**

Operate the front brake lever to seat the caliper pistons against the pads.

Check the brake operation by applying the front brake lever.

