


INSTALLATION

Coat a new O-ring with engine oil and install it into the starter motor groove.

Install the starter motor to the left crankcase.

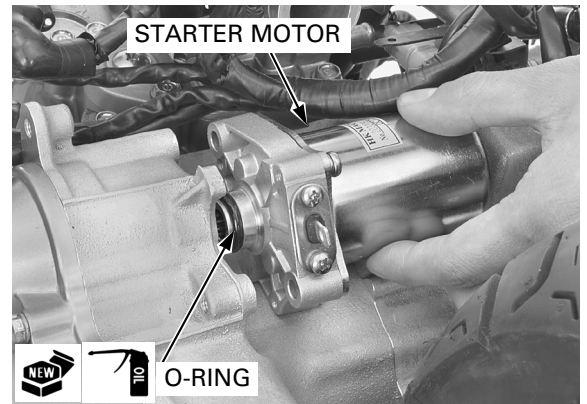

Route the starter motor cable and ground cable properly (page 1-17).

Connect the ground cables and tighten the mounting bolts.

Connect the starter motor cable and tighten the terminal screw.

Put the dust cover back in the appropriate position.

Install the air cleaner housing (page 6-40).

