


FRONT TURN SIGNAL LIGHT

BULB REPLACEMENT

Turn the front turn signal light bulb socket counterclockwise and remove it from the turn signal light unit.

Remove the front turn signal light bulb from the socket by pushing in and turning counterclockwise.

Install the turn signal light bulb socket in the reverse order of removal.

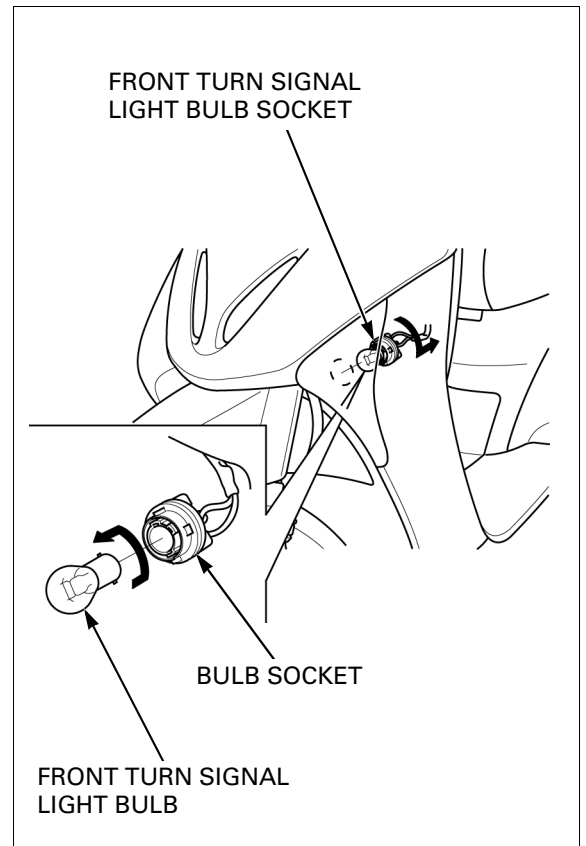

REMOVAL/INSTALLATION

Remove the front cover (page 3-6).

Remove the screws and front turn signal light unit.

Installation is in the reverse order of removal.

