

REAR COMBINATION LIGHT


BRAKE/TAILLIGHT/REAR TURN SIGNAL LIGHT BULB REPLACEMENT

Remove the rear lower body cover (page 3-9).

Turn the bulb socket counterclockwise and remove it from the rear combination light unit.

Remove the bulb from the socket by pushing in and turning counterclockwise.

Installation is in the reverse order of removal.

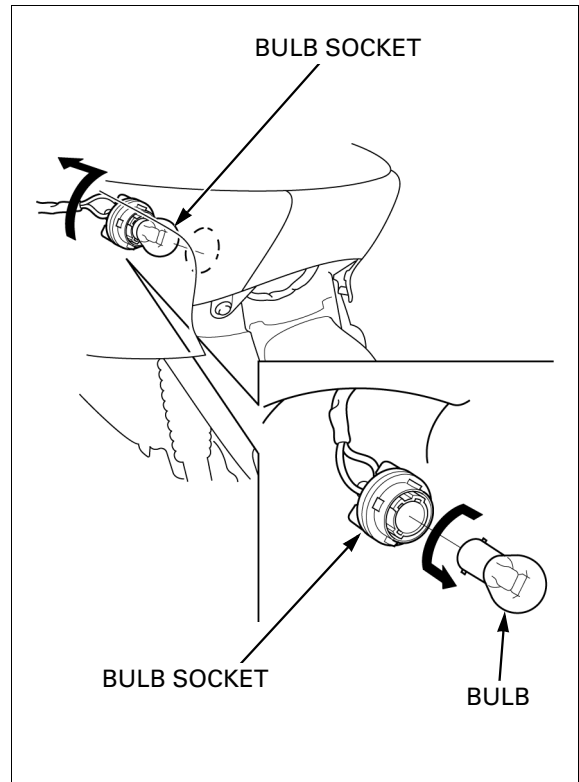


LICENSE LIGHT

BULB REPLACEMENT

Remove the rear lower body cover (page 3-9).

Remove the screws from the license light unit. Remove the license light unit by unhooking the hook.

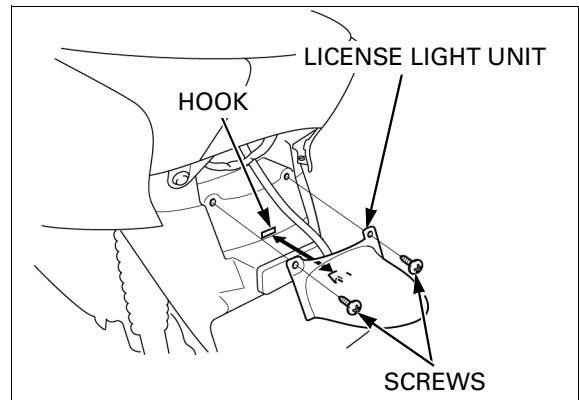

Pull out the license light bulb socket from the light unit.

Remove the license light bulb from the socket.

Installation is in the reverse order of removal.

