

LIGHTS/METERS/SWITCHES



INSPECTION

Remove the front center cover (page 3-4).

Disconnect the ignition switch 3P connector.

Check for continuity at the terminals of the switch side connector in each switch position.

Continuity should exist between the color coded wires as follows:

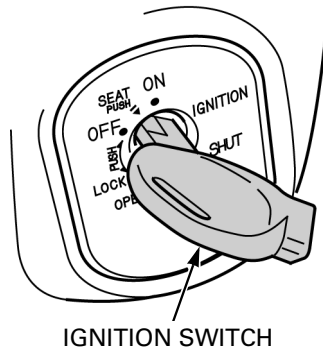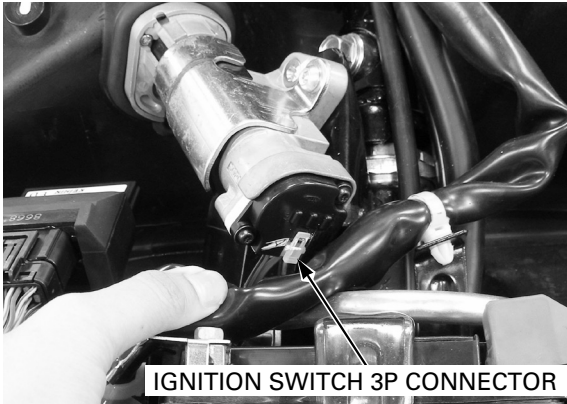

IGNITION SWITCH			
	BAT1	BAT	CDI
ON	○	○	
OFF	○		○
LOCK	○		○
COLOR	R	R/BI	P

HANDLEBAR SWITCHES

RIGHT HANDLEBAR SWITCH INSPECTION

Remove the front handlebar cover (page 3-6).


Disconnect the following:

- Starter switch 3P (Black) connector
- Lighting switch 3P connector

Check for continuity between the terminals of the starter switch connector in each switch position.


Continuity should exist between the color coded wires as follows:

LIGHTING SWITCH CONNECTOR

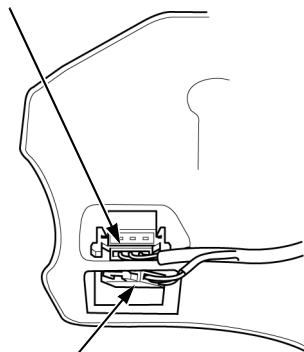

STARTER SWITCH (Black) CONNECTOR

LIGHTING SWITCH

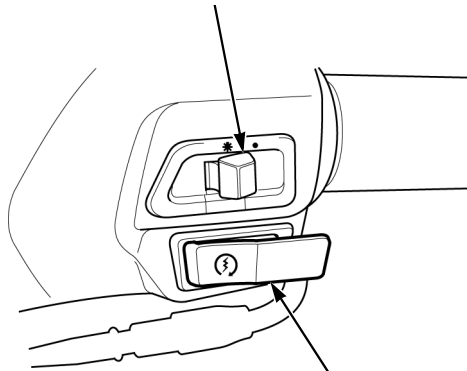

STARTER SWITCH

STARTER SWITCH		
	ST1	ST2
FREE		
PUSH	○	○
COLOR	Bu/G	W/G

LIGHTING SWITCH		
	C1	HL
●		
(N)	○	○
H	○	○
COLOR	BI/R	BI/Br