

LEFT HANDLEBAR SWITCH INSPECTION


Remove the front handlebar cover (page 3-6).

Disconnect the following:

- Dimmer switch 3P connector
- Turn signal switch 3P (Red) connector
- Horn switch 3P (Black) connector

Check for continuity between the wire terminals of the dimmer switch, turn signal switch and horn switch connector in each switch position.

Continuity should exist between the color coded wires as follows:

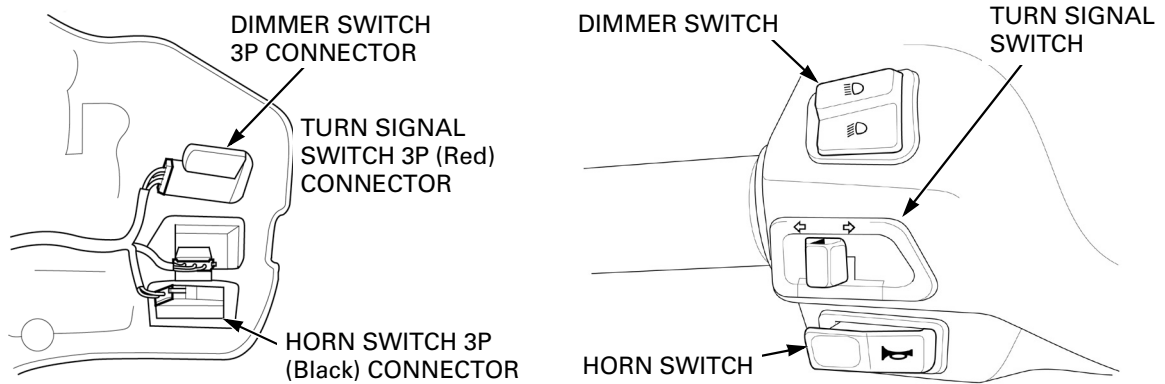

DIMMER SWITCH			
	HI	LO	HL
LO		○—○	○
N	○—○	○—○	○
HI	○—○		○
COLOR	Bu	W	Bl/R

TURN SIGNAL SWITCH			
	W	WL	WR
R	○—○		○
N			
L	○—○		
COLOR	Gr	O	Lb

HORN SWITCH		
	HO	BAT
FREE		
PUSH	○—○	
COLOR	Lg	Bl/Br

BRAKE LIGHT SWITCH


FRONT

Remove the front handlebar cover (page 3-6).

Disconnect the front brake light switch 3P connector and check for continuity of the switch side.

CONNECTION: Green/Yellow – Black/Brown

There should be continuity with the front brake lever squeezed, and there should be no continuity when the front brake lever is released.

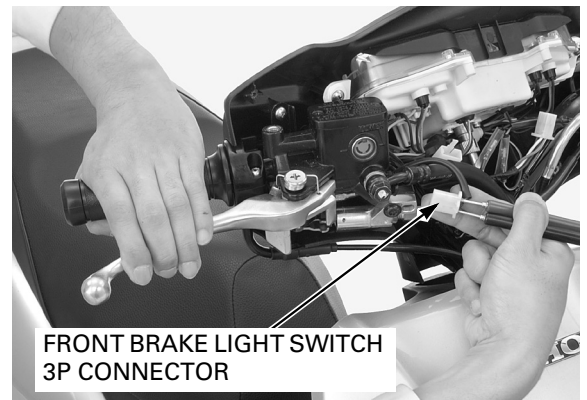

FRONT BRAKE LIGHT SWITCH 3P CONNECTOR