

## LIGHTS/METERS/SWITCHES

### OPERATION INSPECTION

Remove the front center cover (page 3-4).

Turn the ignition switch ON.

The main relay coil is normal if the main relay clicks.

If you hear the main relay "CLICK", but horn does not operate when the horn switch is pushed, inspect the following:

- Main relay continuity inspection (page 21-16)
- Main relay switch line inspection (page 21-17)

If you do not hear the relay "CLICK", inspect the following:

- Main relay coil line inspection (page 21-17)
- Main relay continuity inspection (page 21-16)



### CONTINUITY INSPECTION

Turn the ignition switch OFF.

Remove the main relay (page 21-15).

Connect the ohmmeter to the following main relay terminals.

#### Connection: A – B

Connect the 12 V battery to the following main relay terminals.

#### Connection: C – D

There should be continuity between the relay terminals while the battery is connected, and no continuity when the battery is disconnected.

