

EXHAUST SYSTEM


REMOVAL

▲WARNING

Do not service the exhaust system while it is hot.


MUFFLER

Loosen the muffler band bolt.
Remove the upper and lower muffler mounting bolts, washers and the muffler.
Remove the muffler gasket.

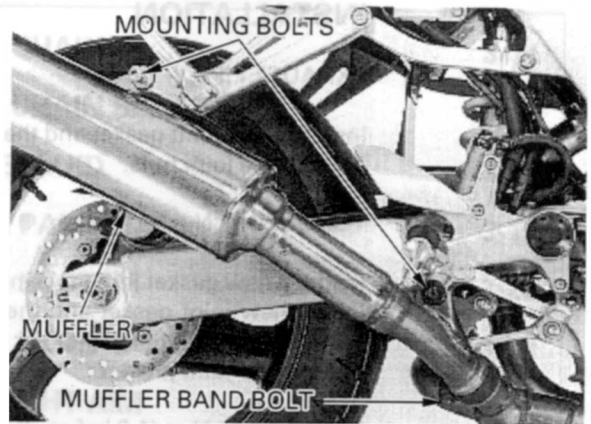


EXHAUST PIPE

Remove the left and right mufflers.
Remove the engine under cover (page 2-4).
Loosen the rear exhaust pipe band bolt.

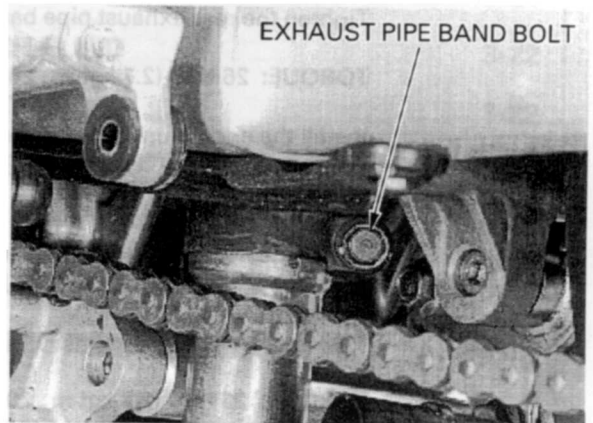

Remove the front exhaust pipe joint nuts and the exhaust pipe.
Remove the front exhaust pipe joint gasket and the exhaust pipe gasket.

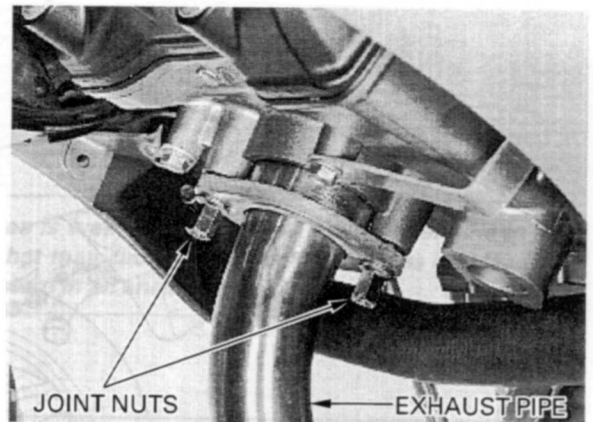

Remove the rear exhaust pipe joint nuts and the rear exhaust pipe.
Remove the rear exhaust pipe joint gasket.

