

STARTER MOTOR

REMOVAL

▲WARNING



Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.

Remove the engine under cover (page 2-4).

Remove the rubber cap, terminal nut and starter motor cable.

Remove the two mounting bolts and the starter motor from the crankcase.


Remove the O-ring from the starter motor.

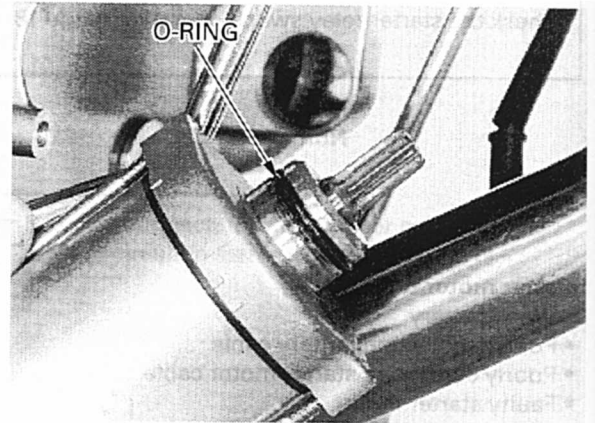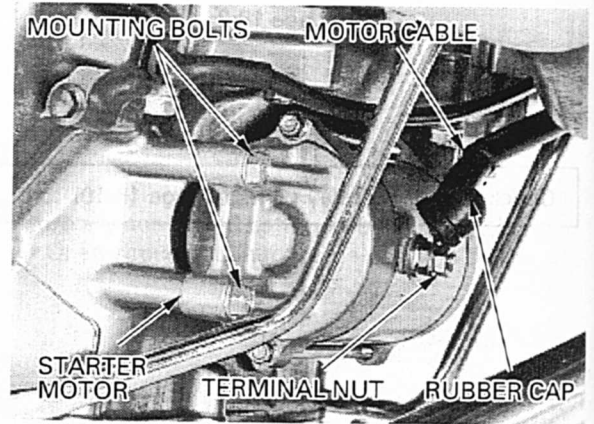

DISASSEMBLY

Remove the starter motor case bolts.

MOTOR CASE BOLTS

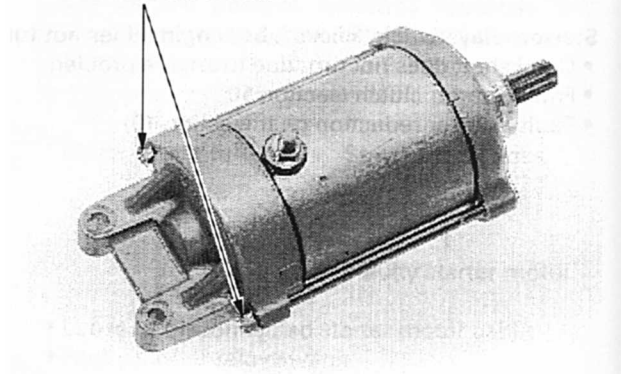

Record the location and number of shims.

Remove the rear cover, seal ring and shims.

