Check for continuity between the No.2 injector and ground.

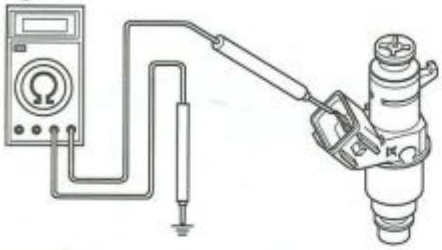

**Connection:**
**Black/White (+) – Ground (–)**
**Standard: No continuity**

Continuity → • Faulty No.2 injector

No continuity

Turn the ignition switch ON.
Measure the voltage between the No.2 injector connector of the wire harness side and ground.

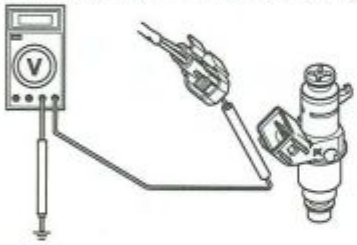

**Connection:**
**Black/White (+) – Ground (–)**
**Standard: Battery voltage**

Out of range → • Open or short circuit in Black/White wire

Voltage exists

Turn the ignition switch OFF.
Connect the No.2 injector connector.