

FRAME/BODY PANELS/EXHAUST SYSTEM


Install the exhaust pipe, temporarily install the exhaust pipe joint nuts and mounting bolt.

NOTE:


Install the mounting collars, washer, bolt and nut properly.

First tighten the exhaust pipe joint nuts to the specified torque.


TORQUE: 21 N·m (2.1 kgf·m , 15 lbf·ft)

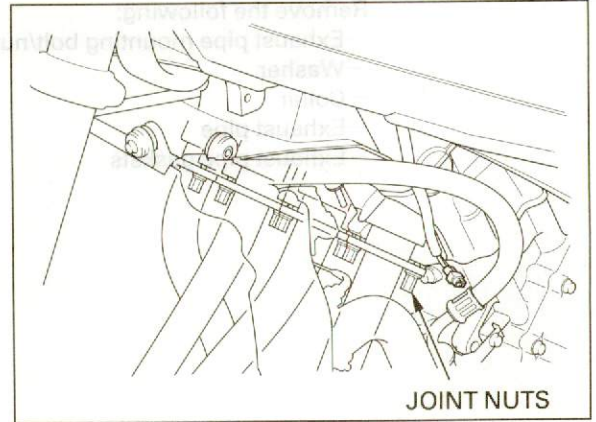

Tighten the exhaust pipe mounting bolt/nut.

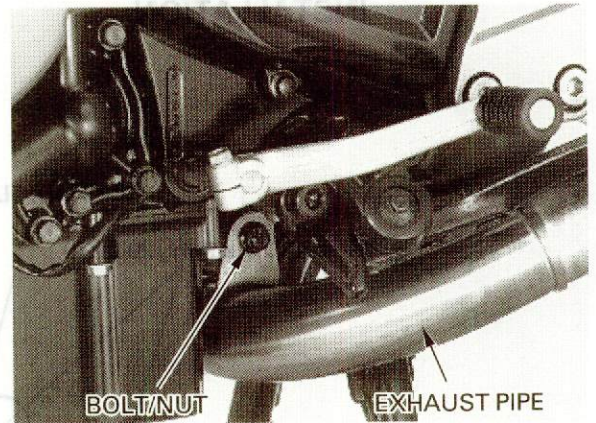

Install the radiator/oil cooler assembly aligning the radiator grommets with the upper and lower brackets.

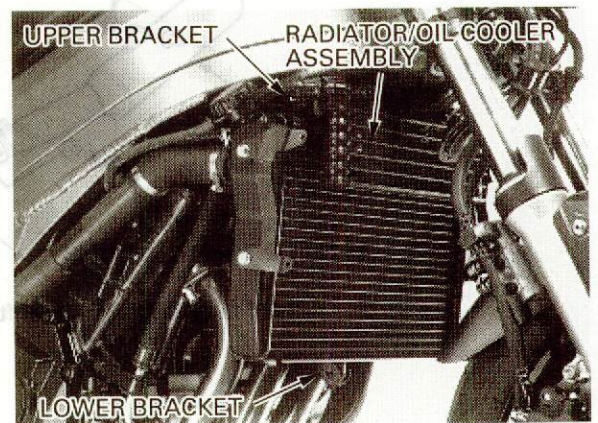

Install the washer and radiator mounting socket bolt, then tighten the socket bolt. Connect the fan motor sub-harness 2P (Natural) connector.

