


FRAME/BODY PANELS/EXHAUST SYSTEM

Temporarily install the muffler mounting bolt/nut.


Tighten the muffler bracket nut to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m , 20 lbf-ft)

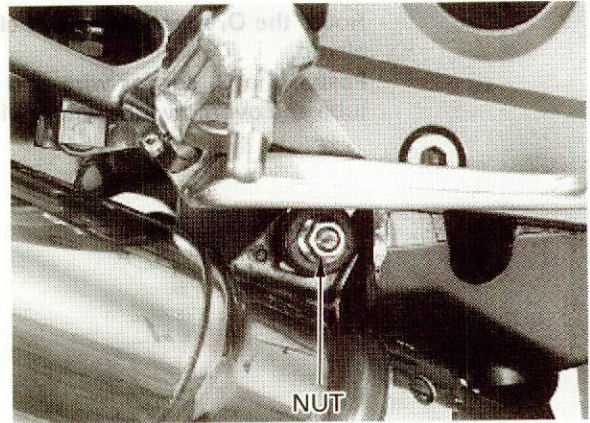


Tighten the muffler mounting bolt/nut to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m , 20 lbf-ft)

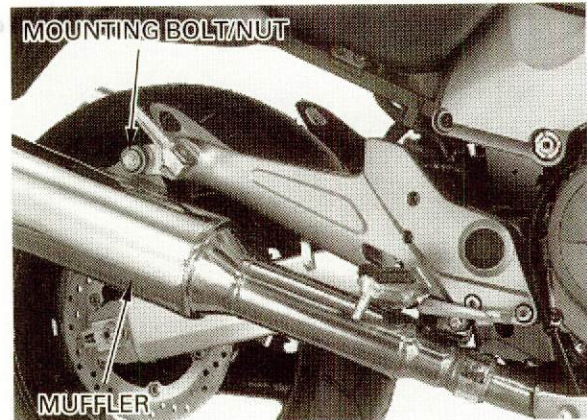

Tighten the muffler band bolts alternately, then tighten to the specified torque.

TORQUE: 18 N·m (1.8 kgf·m , 13 lbf-ft)

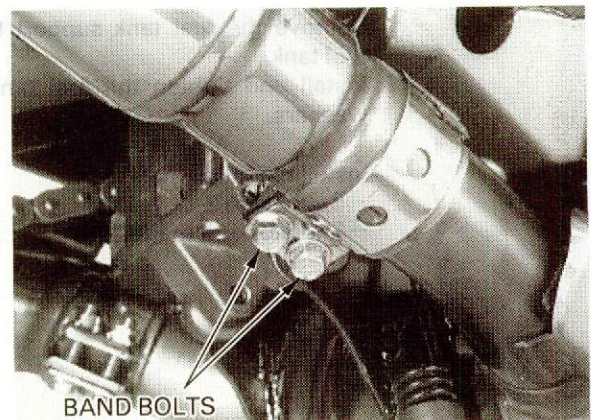

FOOTPEG

REMOVAL

Release the retaining clip end from the V-cut groove.

Pull out the clip from the footpeg joint pin hole. Remove the washer, joint pin and return spring, then remove the footpeg.

