



Apply grease to the sliding surface of the brake pedal and footpeg holder.
Install the brake pedal.

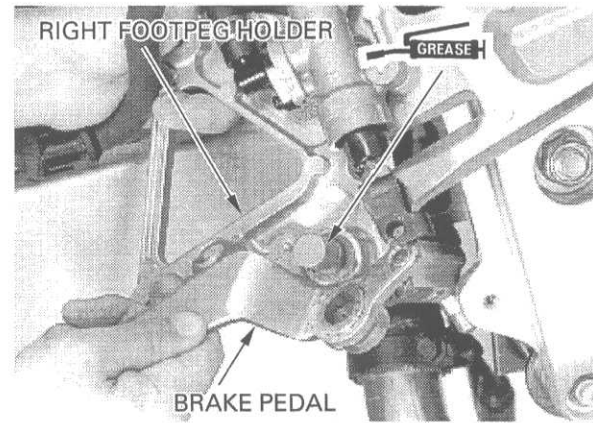

Install the washer, then install the snap ring into the groove securely.

Hook the brake pedal return spring.
Install the brake light switch and hook the switch spring.
Connect the brake pedal to the push rod lower joint.
Install the joint pin and secure it with a new cotter pin.

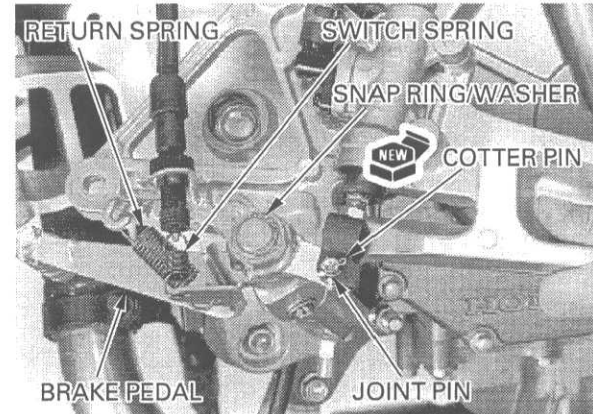

Install the right footpeg holder and tighten the mounting bolts to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m , 20 lbf·ft)

