



Screw the fork bolt in to the fork tube.

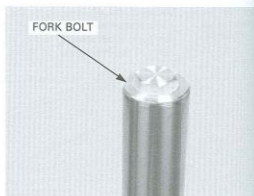

Install the fork protector onto the fork slider, aligning the protector boss with the groove in the fork slider.

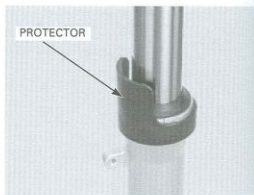

INSTALLATION

Install the fork tube into the bottom bridge.
Align the top end of the fork tube with the upper surface of the top bridge.



Tighten the bottom bridge pinch bolt to the specified torque.

TORQUE: 39 N·m (4.0 kgf·m, 29 lbf·ft)

