



Disconnect the combination meter multi-connector.

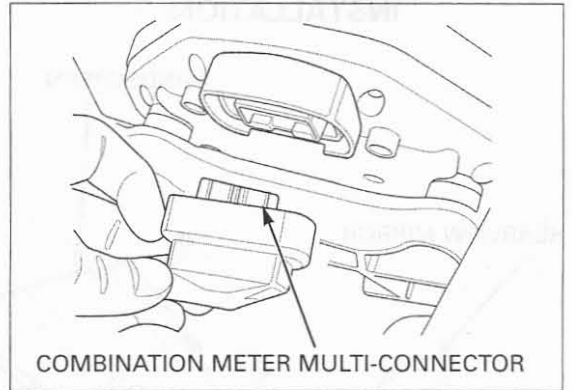

Release the upper cowl off the rearview mirror bolt hole studs and bosses of the upper cowl from the meter stay grommets, then remove the upper cowl assembly.

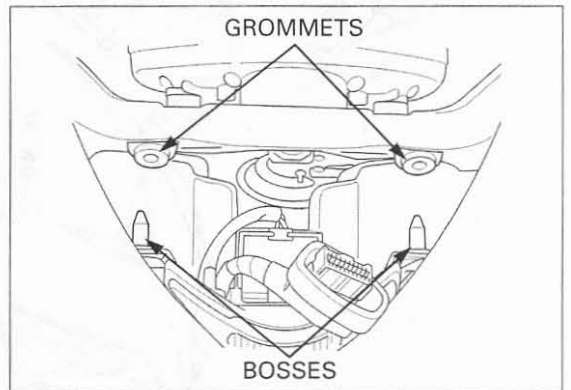

Disconnect the front sub-harness multi-connector.  
See page 20-5 for headlight unit removal/installation.

