



FRONT WHEEL/SUSPENSION/STEERING

Install the right handlebar switch, aligning its locating pin with the hole in the handlebar.

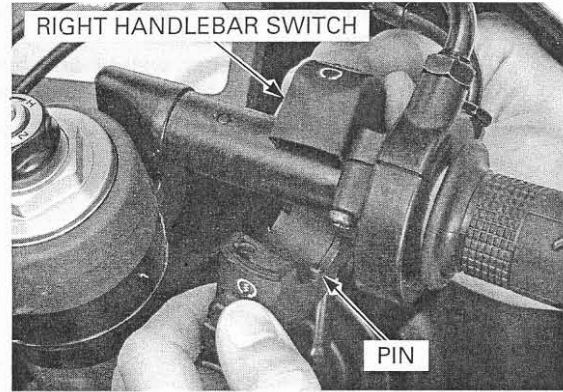

Tighten the screws to the specified torque.

TORQUE: 0.9 N·m (0.09 kgf·m, 0.7 lbf·ft)

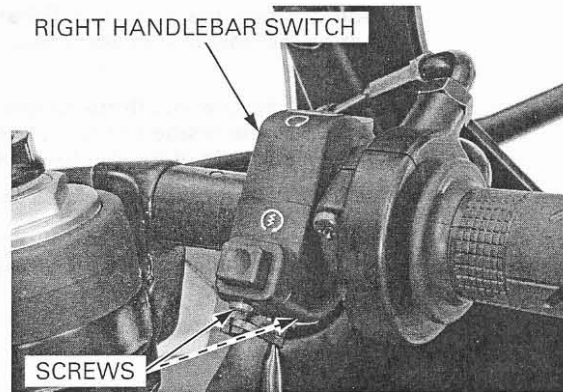


Install the front brake master cylinder and holder with the "UP" mark facing up. Align the end of the master cylinder with the punch mark on the handlebar, and tighten the upper bolt first, then lower bolt.


TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)

Connect the front brake light switch connectors.

Check the throttle grip operation and free play (page 4-7).

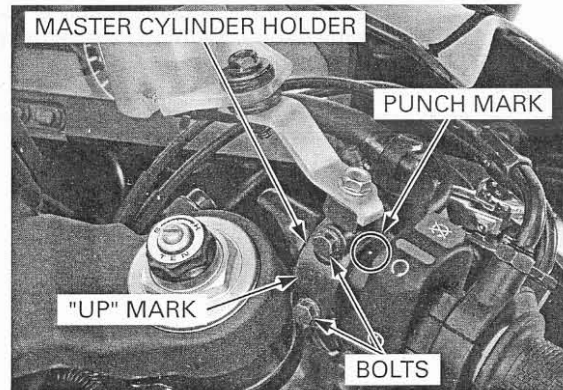

Install the switch end cover to the left handlebar. Apply Pro Honda Handgrip Cement or equivalent to the inside surface of the handlebar grip and to the clean surface of the handlebar. Wait 3 - 5 minutes and install the grip.

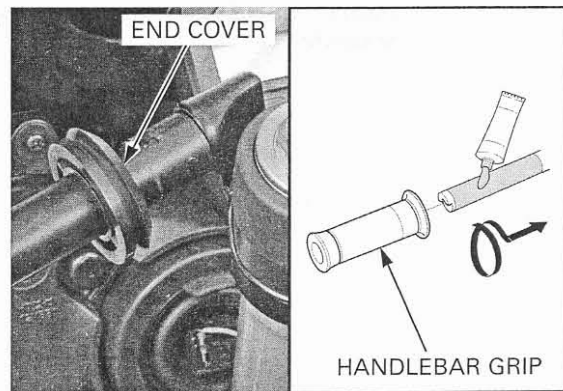

Allow the adhesive to dry for an hour before using.

Rotate the grip for even application of the adhesive.