


## HYDRAULIC BRAKE

Apply brake fluid to new O-ring and install it to the reservoir hose joint.

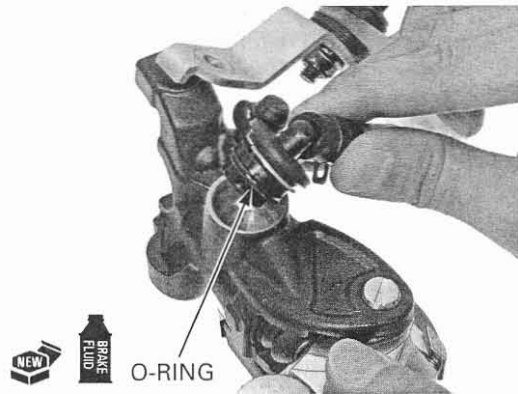

Install the master cylinder reservoir joint into the master cylinder and secure the joint with the snap ring.

**TOOL:**


**Snap ring pliers**

**07914-SA50001**

Install the dust cover.

Install the reservoir stay onto the master cylinder and tighten the mounting bolt to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

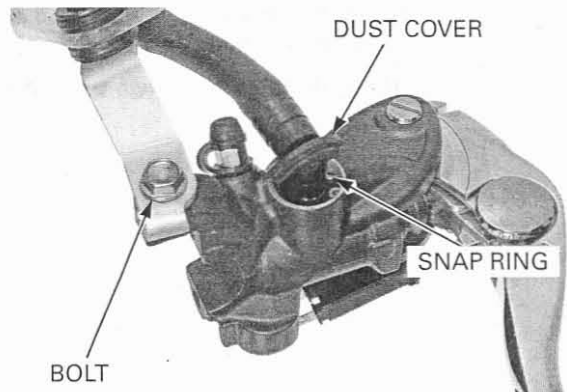


*Install the master cylinder holder with its "UP" mark facing up.*

Install the master cylinder assembly, master cylinder holder and bolts.

Align the end of the master cylinder with the punch mark on the handlebar (page 14-14). Tighten the upper bolt first, then the lower bolt to the specified torque.

**TORQUE: 12 N·m (1.2 kgf·m, 9 lbf·ft)**

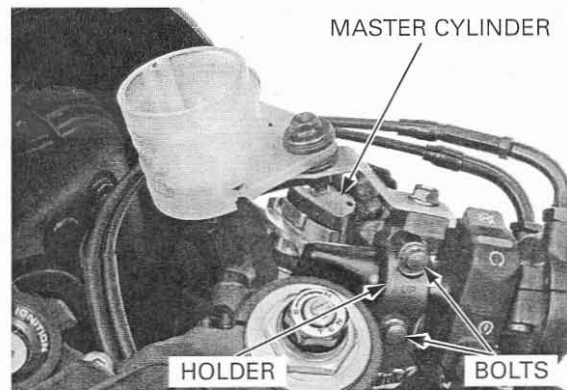

Install the brake hose eyelet with the oil bolt and new sealing washers.

Push the eyelet joint against the stopper, then tighten the oil bolt to the specified torque.

**TORQUE: 34 N·m (3.5 kgf·m, 25 lbf·ft)**

Connect the brake light switch connectors.

Fill brake fluid and bleed air from the front brake hydraulic system (page 16-8).

