


## HYDRAULIC BRAKE

*Put the bracket in at the hook of the heat guard.*

Install the right footpeg bracket to the frame and tighten the bolts to the specified torque.

**TORQUE: 37 N·m (3.8 kgf·m, 27 lbf·ft)**

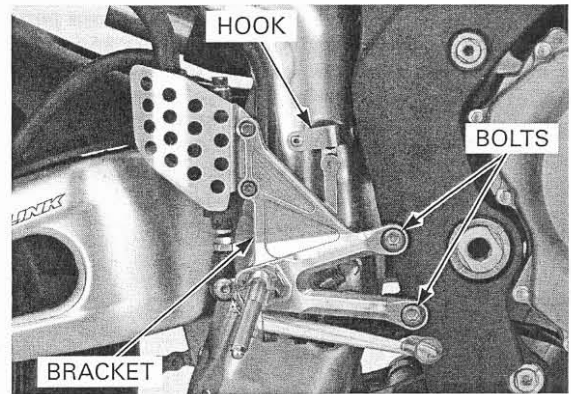

Route the rear brake light switch wire properly. Connect the 2P (Black) connector and secure the brake light switch wire to the wire clamp.

Install the right middle cowl (page 3-9).

